



www.ordnancesurvey.co.uk

Land-Form PANORAMA[®]

User guide v3.0

Preface

This user guide contains all the information you need to make effective use of Land-Form PANORAMA®. It is designed to help you understand the information contained in the data, as well as providing detailed technical information and the data format specification.

This user guide has been checked and validated before issue and every endeavour made to ensure that the contents are accurate. If you find an error or omission, or otherwise wish to make a suggestion as to how this user guide can be improved, please contact us at the address shown under Contact details.

The contents of this user guide will be updated by the release of replacement chapters.

Contact details

Sales Information will be pleased to deal with your enquiries:

Sales Information Helpdesk

Phone: 08456 05 05 05

Fax: 023 8079 2615

Email: enquiries@ordsvy.gov.uk

or write to:

Sales Information
Ordnance Survey
Romsey Road
SOUTHAMPTON
United Kingdom
SO16 4GU

Visit the Ordnance Survey web site at: www.ordnancesurvey.co.uk

Product performance

If you have any problems with or identify any errors in the data or this user guide, please complete the [Product performance report form at appendix B](#) and return it to us.

Liability

A full description of the terms and conditions of supply and use of Land-Form PANORAMA is detailed in the signed *Customer contract* held by you or your organisation.

Ordnance Survey makes every effort to ensure that data supplied is free from errors and omissions. We will remedy, as soon as reasonably practicable, errors and omissions that the customer notifies to us in writing. It is the customer's responsibility to ensure that data ordered is suitable for the intended purpose. We will not be liable to the customer or any other party for any loss, damage, inconvenience or expense resulting from the use of, or reliance upon, the data.

Delivery of Land-Form Panorama

You are advised to copy the supplied data to a back-up medium.

Written notification of any deficiency in the data or damage to the goods must be given to us within 28 days of receipt of Land-Form PANORAMA.

Data copyright

All Ordnance Survey digital map data are Crown copyright. Full details of the conditions under which our digital map data may be processed and/or manipulated or copied by a customer – whether or not for use on PCs or workstations or for making hard copies – are contained in Ordnance Survey leaflet: *Copyright 1 – Business use of our digital and conventional mapping*. These are available from Copyright Licensing, please see overleaf. You should check the terms and conditions with us before using the data. It is also the responsibility of the holder of the digital map data to ensure that any plotted or printed output contains the required copyright acknowledgement.

User guide copyright

This document is © Crown copyright 2001. All rights reserved. It is supplied with Land-Form PANORAMA to allow you to make effective use of the data. Any part of it may be copied for your own business use. Business use is defined as actions related to business decision-making or as part of day-to-day operations associated with the running of a business. No part of this document may be copied or incorporated in products, services or publications you generate for onward sale or as free promotional or support material without the prior written permission of Ordnance Survey.

Trade marks

Ordnance Survey, the OS Symbol, Landranger, Land-Form PANORAMA and OSGB36 are registered trade marks and Land-Form PROFILE is a trade mark of Ordnance Survey, the national mapping agency of Great Britain.

AutoCAD and Autodesk are registered trade marks and DXF is a trade mark of Autodesk Inc.

UNIX is a registered trade mark of UNIX Systems Laboratories.

Contents

Chapter 1	Introduction	1.1
	Using this user guide	1.1
	Land-Form PANORAMA – an introduction	1.2
	Land-Form PANORAMA features	1.2
	Land-Form PANORAMA benefits	1.2
	Land-Form PANORAMA applications	1.3
	What you need to use Land-Form PANORAMA	1.3
	Hardware	1.3
	Software	1.4
	Land-Form PANORAMA supply options	1.4
	Transfer format(s)	1.4
	Media	1.4
	Land-Form PANORAMA supply unit	1.5
	Update/update options	1.5
	National transfer format (NTF) release	1.5
	Land-Form PANORAMA output options	1.5
Chapter 2	Overview of Land-Form PANORAMA	2.1
	Data overview	2.1
	Basic principles	2.1

Chapter 3	Land-Form PANORAMA explained	3.1
	Contours	3.1
	Spot heights	3.1
	Breakline	3.1
	Formline	3.1
	Land-Form PANORAMA data structure	3.2
	Attribute data	3.2
	Feature position	3.2
	Feature codes	3.2
	Feature serial number (FSN)	3.3
	Edgematch	3.3
	Update of Land-Form PANORAMA information	3.3
	Land-Form PANORAMA data source	3.4
	Digital contours	3.4
	Digital terrain model (DTM) data	3.4
	DTMs	3.5
	Accuracy	3.5
	Data overview	3.5
Chapter 4	Quality Statement	4.1
	Completeness	4.1
	Currency	4.1
	Geometric connectivity	4.1
	Attribute accuracy	4.2
	Logical consistency	4.2
	Media	4.2
	Absolute accuracy	4.3
Chapter 5	Tile numbering and the National Grid	5.1

Chapter 6	NTF explained	6.1
	An overview of Land-Form PANORAMA in NTF	6.1
	Conventions used in this user guide	6.2
	Data overview	6.3
	File structure	6.3
	Version management	6.5
	Product copyright	6.5
	NTF version	6.5
	General	6.6
	Record size	6.6
	Continuation mark {CONT_MARK}	6.6
	Record terminator {EOR}	6.6
	Transfer set	6.6
	Data supply structure	6.7
	Supply of data on formatted media	6.7
	Transfer set structure	6.8
	Volume records	6.8
	Database records	6.8
	Section records	6.9
	Structure of Land-Form PANORAMA contours in NTF	6.10
	Section data records for contours	6.11
	Coordinate referencing system for contours	6.12
	Structure of Land-Form PANORAMA DTMs in NTF	6.13
	Record configuration for Land-Form PANORAMA DTM data in NTF	6.13
	Coordinate reference system for DTMs	6.14

Chapter 7	Record structures for the transfer of Land-Form PANORAMA in NTF	7.1
	NTF record list for Land-Form PANORAMA contours	7.1
	Volume Header Record [VOLHDREC] 01	7.2
	Database Header Record [DBHREC] 02	7.3
	Feature Classification Record [FEATCLASS] 05	7.4
	Section Header Record [SECHREC] 07	7.5
	Point Record [POINTREC] 15	7.7
	Two-dimensional Geometry Record [GEOMETRY1] 21	7.8
	Line Record [LINEREC] 23	7.9
	Attribute Description record [ATTDESC] 40	7.10
	Volume Terminator record [VOLTERM] 99	7.11
	NTF record list for Land-Form PANORAMA DTMs	7.12
	Volume Header Record [VOLHDREC] 01	7.13
	Database Header Record [DBHREC] 02	7.14
	Data Description Record [DATADESC] 03	7.15
	Data Format Record [DATAFMT] 04	7.16
	Section Header Record [SECHREC] 07	7.17
	Grid Header Record [GRIDHREC] 50	7.19
	Grid Data Record [GRIDREC] 51	7.20
	Volume Terminator Record [VOLTERM] 99	7.22
Chapter 8	DXF explained	8.1
	An overview of Land-Form PANORAMA	8.1
	Structure of Land-Form PANORAMA contours	8.1
	Line features	8.1
	Structure of Land-Form PANORAMA DTMs	8.2
	Land-Form PANORAMA DXF layers	8.2
	Generalised feature record representation	8.2
	Land-Form PANORAMA footnotes	8.3
	Map footnotes	8.3
	DXF file structure for Land-Form PANORAMA	8.5
	Layers lists	8.6
	Layer names and descriptions for Land-Form PANORAMA contours in DXF	8.6
	Layer names and descriptions for Land-Form PANORAMA DTMs in DXF	8.6

Chapter 9	DXF file structure for Land-Form PANORAMA	9.1
	General	9.1
	Header section	9.1
	Tables section	9.5
	Linetype table	9.6
	Layer table	9.9
	Style table	9.10
	Blocks section	9.14
	Entities section	9.16
	End of file group	9.23
Appendix A	Glossary	A.1
Appendix B	Product performance report form	B.1

Chapter 1 Introduction

Using this user guide

This chapter and [chapter 2](#) provide an introduction to Land-Form PANORAMA® and illustrate potential applications. Chapter 3 contains more detailed information about the data. These chapters are designed to enable users to make effective use of Land-Form PANORAMA and contain all the information you will need. Please refer to the [glossary at appendix A](#) if you are unfamiliar with any of the terms used.

All aspects of Land-Form PANORAMA discussed in this user guide relate to Land-Form PANORAMA in both BS 7567 (NTF v2.0) and DXF™ (AutoCAD® release 12) formats. If the two format versions differ in their treatment of a particular aspect, the specific differences will be stated; icons, as shown below, will be used to denote these differences.



For convenience BS 7567 (NTF v2.0 Level 1) is referred to as NTF1 and BS 7567 (NTF v2.0 Level 5) is referred to as NTF5 in this user guide.



Drawing Interchange File format (DXF) is referred to as DXF in this user guide. DXF AutoCAD release 12 compatible data complies with *Layer Naming Convention for CAD in the Construction Industry Version 2*, which is based upon the guidelines laid down in BS 1192: Part 5.

Land-Form PANORAMA – an introduction

Land-Form is the generic name given to all Ordnance Survey digital height products. These consist of:

- Land-Form PANORAMA, which is dealt with in this user guide; and
- Land-Form PROFILE™, which is dealt with in the *Land-Form PROFILE user guide*.

Land-Form PANORAMA features

Ordnance Survey's Land-Form PANORAMA data is a dataset representing the physical shape of the real world.

The data is available to customers as:

- Land-Form PANORAMA contour tiles, which includes contours, spot heights, breakline, coastline, lakes, and ridge and form lines.
- Land-Form PANORAMA digital terrain model (DTM) tiles – a 50 m grid of heighted points derived from the contour product.

Land-Form PANORAMA benefits

Contours are in vector format and are at 10 m elevation intervals.

National cover.

Spot heights are to the nearest metre.

The data has been captured in 20 km by 20 km tiles.

The accuracy of digital contours is typically better than 3 m (root mean square error).

DTM consists of height values at each intersection of a 50 metre horizontal grid.

Land-Form PANORAMA applications

This product offers many exciting opportunities for modelling the real world more closely by the use of three-dimensional computing techniques.

The data supports such applications as:

- terrain analysis;
- drainage analysis;
- visual impact studies; and
- radio wave propagation.

What you need to use Land-Form PANORAMA

Hardware

Requirements will vary depending on the data volumes users wish to access.

Average tile sizes are:

Storage volume per tile	Contours	DTMs
NTF (average)	1.5 Mb	0.75 Mb
NTF (maximum)	4.5 Mb	0.75 Mb
DXF (average)	11.8 Mb	11.8 Mb
DXF (maximum)	36 Mb	11.8 Mb

Software

Land-Form PANORAMA is inert data and does not include software for data viewing or manipulation. To fully exploit its potential it is necessary to have appropriate application software. There are many proprietary systems available and we publish a list of geographical information system (GIS), computer-aided design (CAD) and digital mapping licensed system suppliers who have confirmed that their software can import Land-Form PANORAMA in either NTF or DXF format. Please contact us at the address at the beginning of this user guide for a copy of the list.

Land-Form PANORAMA supply options

Transfer format(s)

Land-Form PANORAMA contours are supplied in:

- BS 7567 (NTF v2.0) Level 1 ([see chapter 6](#)); or
- DXF AutoCAD release 12 compatible ([see chapter 8](#)).

Land-Form PANORAMA DTMs are available in:

- BS 7567 (NTF v2.0) Level 5 ([see chapter 6](#)); or
- DXF AutoCAD release 12 compatible ([see chapter 8](#)).

Media

Land-Form PANORAMA is supplied in NTF on the standard Ordnance Survey media range, whilst DXF is available on CD-ROM only.

Land-Form PANORAMA supply unit

Land-Form PANORAMA is supplied as Great Britain, England, Scotland and Wales coverages.

Data can be also be supplied in tiles. Each tile covers an area of 20 km by 20 km. There are 812 tiles in the series.

Update/update options

Land-Form PANORAMA is a frozen dataset and is not updated.

National transfer format (NTF) release

The current release is NTF v2.0 and will be supplied until further notice. [See chapter 6.](#)

Land-Form PANORAMA output options

Land-Form PANORAMA is inert data. It requires software (not provided by Ordnance Survey) to display it on a screen, manipulate it or plot it out as hard copy.

Chapter 2 Overview of Land-Form PANORAMA

Data overview

Basic principles

Land-Form PANORAMA contours were created from height elements depicted in the Landranger 1:50 000 scale map series.

Land-Form PANORAMA DTMs consist of height values at each intersection of a 50 metre horizontal grid, the values have been mathematically interpolated from the contours on the Landranger® maps.

Chapter 3 Land-Form PANORAMA explained

Contours

Contours are shown at a vertical interval of 10 m.

All contours consist of one continuous feature across a tile except that:

- in areas of steep slope some contours will be omitted – this is where some contours were omitted from the graphic product for cartographic purposes;
- where coincident with man-made features, contours may be broken (in general, contours were not shown on 1:50 000 scale mapping where they coincided with published man-made slopes); and
- contours are not shown in active quarries, gravel pits, spoil heaps or opencast mines.

Spot heights

These are heighted points captured by ground survey methods, and are normally positioned along the centre of roads.

Breakline

A line indicating discontinuity in a terrain surface, that is, an abrupt change in gradient.

Formline

A supplementary contour not corresponding to the normal contour vertical interval and estimated from surrounding contours; used in areas where there is insufficient height information to control the creation of DTMs. Formlines do not feature in all contour tiles.

Land-Form PANORAMA data structure

Each point or line feature itself consists of two data categories – geometric data and attribute data. Geometric data defines a feature's position in terms of National Grid coordinates and height, and attribute data defines its descriptive characteristics.

Attribute data

An attribute is the descriptive characteristic of a feature, that is a non-spatial element. The geometry of the points and lines within the data would be meaningless unless they are assigned some distinguishing property. In Ordnance Survey map data terms, an attribute can be a feature code (in NTF1 these are numeric codes) or a distinctive name or number.

Feature position

The geometry of map features is identified in terms of coordinates. All coordinates used in Land-Form PANORAMA are based on the National Grid coordinate referencing system. Despite this, Land-Form PANORAMA can be no more accurate than its source, primarily 1:50 000 scale published mapping.

Feature codes

The point and line records contain feature codes describing the feature depicted. The values of these codes and their description are:

Feature code	Description
0200	Spotheight
0201	Contours
0202	Lake
0203	Breakline
0204	Coastline
0205	Ridgeline
0207	Formline

Feature serial number (FSN)



Each feature is given an FSN which is unique within a tile. Every attempt is made to maintain the integrity of FSNs.

Edgematch

All contour tiles are edgematched. Where a contour ends by intersecting the tile edge, it is matched with the corresponding contour on the adjoining tile, so that both contours:

- end on the same unique coordinate;
- have the same feature code;
- have the same height attribute; and
- have the same direction.

Coast lines may have been surveyed at different times on adjacent sheets and for this reason have been edgematched for planimetric position but not for height.

Update of Land-Form PANORAMA information

Land-Form PANORAMA is a frozen dataset and is not updated.

Land-Form PANORAMA data source

Digital contours

Land-Form PANORAMA contours are a digital representation of the graphic contours used to produce Ordnance Survey Landranger maps. Additional spot heights, and ridgelines and formlines were added to facilitate the creation of the DTMs; these additional features are included in the contour product, not necessarily on every tile.

Contours are in vector format and are at 10 m elevation intervals.

Spot heights are to the nearest metre.

Formlines are inserted into the digital contour data where there is insufficient height information to control creation of the complementary digital terrain model product. These formlines are interpolated from the surrounding contours. Formlines do not appear on all contour tiles.

The accuracy of digital contours is typically better than 3 m (root mean square error).

Digital terrain model (DTM) data

A DTM consists of height values at each intersection of a 50 metre horizontal grid – the values have been mathematically interpolated from the contours on the Landranger maps.

Variations in DTM accuracy are to be expected depending upon the nature of the ground. DTM height accuracy is typically better than one half of the vertical interval of the source contour data.

The data has been captured in 20 km by 20 km tiles, and is available for the whole country

DTMs

Accuracy

The process of creating DTMs utilises all the height information contained in the contour file to generate the height of each of the points in the DTM. The results achieved will depend upon the density of height data contained in the contour file and on the nature of the terrain.

In some flat areas, where there is little height information, contours and spot heights may be a great distance apart; this can cause irregularities in the DTM, which appear as slight terracing of the terrain.

Data overview

The DTM tiles in both NTF and DXF consist of a series of heighted points arranged on a 50 m grid.



The points themselves do not hold any horizontal coordinate information – their position being implied by the order in which they are held. The format of the grid is included in the map header and conforms to the following pattern: the first point is positioned on the south-west corner of the tile, with further points at 50 m intervals northwards to the northern edge, of the tile; the next point will be on the south edge 50 m east of the origin, again progressing in 50 m intervals to the north edge.



The first point is positioned on the south-west corner of the tile, with further points at 50 m intervals northwards to the northern edge of the tile, creating a column of 401 points. The next column will start on the southern edge of the tile 50 m east of the origin, again progressing in 50 m intervals to the north edge of the tile.

For both data formats, this pattern is repeated until the final point, which falls on the north-east corner of the tile. Therefore, there are a total of 160 801 points on each tile.

Chapter 4 Quality Statement

Completeness

Completeness is a measure of the correspondence between the real world and the specified data content.

The Land-Form PANORAMA product contains the height elements (contours, spot heights) as they appeared on published 1:50 000 scale mapping at the time of creation.

Where contours are broken on the maps, for example, at embankments and cuttings or within active quarries, they are also broken in the data. Contours may also be broken at very steep slopes, where they would merge when depicted at 1:50 000 scale on the printed map.

Gaps for contour labels, which occur on paper maps, do **not** appear in Land-Form PANORAMA – these gaps are always closed in the data.

Currency

Currency identifies when Land-Form PANORAMA was created.

Land-Form PANORAMA is a frozen dataset and is not updated.

Geometric connectivity

Connectivity is the measure of how well feature representations relate to each other spatially and in comparison to the real world. Due to their nature, no two contours should ever intersect – contours cannot represent vertical cliffs or overhangs. This rule is enforced in the data, which will contain no contour intersection. Where contours cross high water at a steep angle that could be interpreted as a cliff, they are truncated at the high water. This means an intersection between a contour and a coastline can exist.

Contours or coastlines which cross the edge of a data tile have common coordinates at the point of intersection with the tile edge. In addition to the plan coordinates, the feature code and contour height values are also matched across tile boundaries.

Attribute accuracy

Attribute accuracy measures the correct interpretation and representation of the metadata elements within the data structures, that is, the correct value of an attribute has been recorded. For example, attribute accuracy will identify that all contours have feature code 0201 and that no other features have been incorrectly recorded as that feature code. The verification of attribute accuracy forms part of the quality checking procedures carried out on Land-Form PANORAMA data.

Logical consistency

The *logical consistency* of Land-Form PANORAMA is a measure of how well the files supplied to customers match the specification laid down for the files, regardless of content. This covers the logic within the data and the syntax of the files supplied.

All Land-Form PANORAMA data is validated to ensure that it conforms to the specification in terms of syntax, integrity and feature code range.

Land-Form PANORAMA data is normally supplied in NTF levels 1 (contours) or 5 (DTM) (BS 7567 compliant), or DXF format. All Land-Form PANORAMA data undergoes stringent testing by software to ensure that the syntax of the files supplied conforms to the standard defined for the format. Customers must ensure that the software they use conforms to the same standard.

Media

Land-Form PANORAMA is supplied on media in predefined formats, for which two different measures of quality are used:

- tests on the logical consistency of the data; and
- integrity of the supply media.

The media are new and from recognised, branded sources. Error rates have been found to be very low and the media are checked to ensure that they are free from any known viruses.

Absolute accuracy

Absolute accuracy is a measure which indicates how closely the coordinates, in a particular reference system, of a point in the data agree with the *real* coordinates of the same point on the ground.

The planimetric coordinates of Land-Form PANORAMA data are in the National Grid coordinate reference system, which is defined by the OSGB36[®] triangulation. The heights are normally related to mean sea level at Newlyn. Any comparison between Land-Form PANORAMA and coordinates given by the Global Positioning System (GPS), which are in the WGS84 system, must take into account the differences between the two reference systems.

Although contours do not exist as visible features on the ground, the plan position of points along a contour can be extracted from the map (or the data) and heights can be determined at these points using high-accuracy surveying techniques.


The accuracy of the contours has been found to be of the order of ± 3.0 m root mean square error (RMSE). These refer to the differences between the contour height recorded on the map and the measured height (above mean sea level) at the points on the ground represented by that contour. The measured heights are defined with respect to local control points connected to the Ordnance Survey network of levelled heights, which relate to mean sea level – normally Newlyn datum.

Chapter 5 Tile numbering and the National Grid

Land-Form PANORAMA tiles are identified by quoting the National Grid reference of the south-west corner of the area they cover. The Ordnance Survey National Grid divides Great Britain into squares 100 km by 100 km. Each of these squares has a unique two-letter reference, for example, TG in the diagram below.

Each Land-Form PANORAMA 20 km by 20 km tile is described by adding a two-digit reference to the 100 km by 100 km square reference, with the easting first followed by the northing, for example, TG23.

For additional information on how to use the National Grid, visit Ordnance Survey's web site at: www.ordnancesurvey.co.uk. To navigate to the National Grid site, click on *Education & MapZone* in the menu and then on *National Grid*.

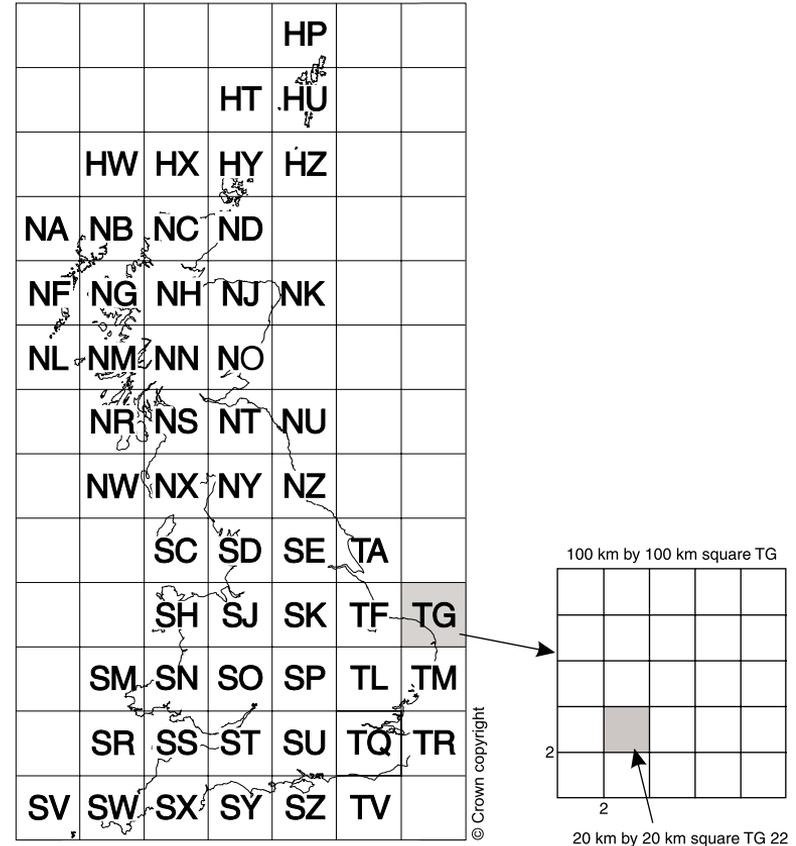

Chapter 6 NTF explained

The purpose of this chapter and [chapter 7](#) is to:

- Provide a brief description of the presentation of Land-Form PANORAMA in the NTF transfer format: BS 7567 (NTF v2.0 Levels 1 and 5); and
- Provide licensed system suppliers with as much detail as necessary to enable Land-Form PANORAMA files in NTF to be easily understood and processed by application software.

The term *data structure* refers to the organisation and sequence of the records in the data file and not to the geographical topology of the data.

An overview of Land-Form PANORAMA in NTF

Land-Form PANORAMA is supplied in the British Standard national format common to the majority of Ordnance Survey's digital map data products, namely NTF, and is transferred in Level 1 for contours and Level 5 for DTMs.

An overview of the data structure of a Land-Form PANORAMA data file is shown in diagrammatic form in [figure 6.1](#). The convention used for this diagram is in the industry standard adopted for Jackson Structured Programming (JSP).

The British Standard for NTF stipulates the following for level 1:

The main purpose of this level is to permit the addition of many attributes to the lines and points. Text may be linked to a feature as an attribute. This is used for simple vector data. Lines, points and text are separate entities and may be given one feature code and one attribute value, for example a contour height.

Level 1 also introduces information about the data in the form of quality records.

The British Standard for NTF stipulates the following for level 5:

This is a user-definable format and is intended mainly for highly specialised datasets, such as those that contain complex semantic relationships.

Level 5 carries a data dictionary comprising data description and data format records and is the point at which NTF becomes self-documenting.

The governing body for the industry standard NTF is now the British Standards Institution (BSI).

Their address is:

389 Chiswick High Road
LONDON
W4 4AL

Phone: 020 8996 9000

Fax: 020 8996 7400

Note: Full details of the British Standard can be accessed through the British Standards Institution's web site at: <http://www.bsi.org.uk/>, [click here for the NTF catalogue entry at BS7567](#).

Conventions used in this user guide

Certain conventions are adopted as an aid to interpretation. In some cases the convention is dropped where the context is self-evident.

- [] Square brackets are placed around record names, for example, [VOLHDREC].
- [] 99 A two-digit number following square brackets denotes the record descriptor which uniquely identifies the record name between the brackets.
- { } A pair of braces denote field names, for example, {REC_DESC} is the record descriptor field.
- <S> This is the space character (ASCII code 32).
- <3S> This denotes three successive space characters.
- % The percentage character denotes end of record (ASCII code 37).
- | This denotes repeating fields (ASCII code 124).

Data overview

File structure

An overview of the data format of a Land-Form PANORAMA data file in NTF is shown below. The convention used for this diagram is in the industry standard adopted for Jackson Structured Programming (JSP).

Fig 6.1: Overall logical structure of an NTF file


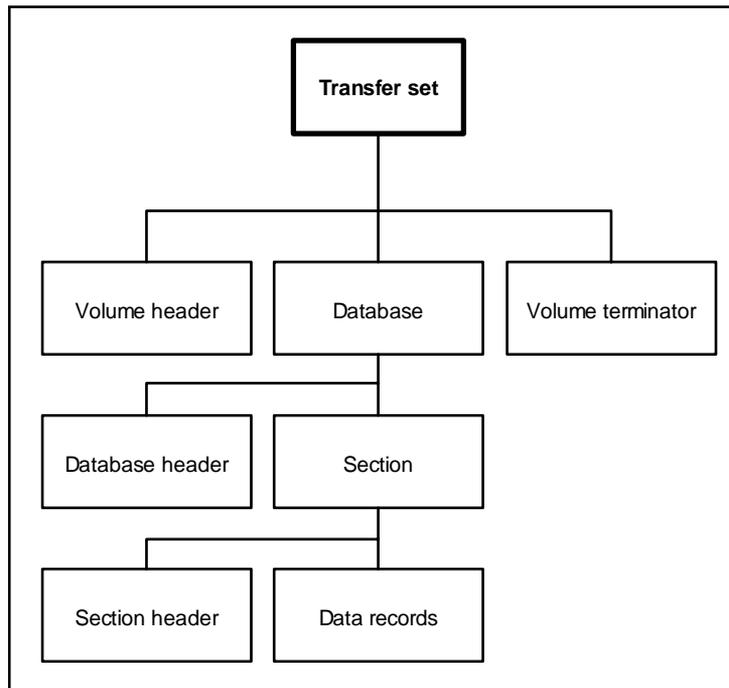


Figure 6.2: Physical file structure of an NTF file

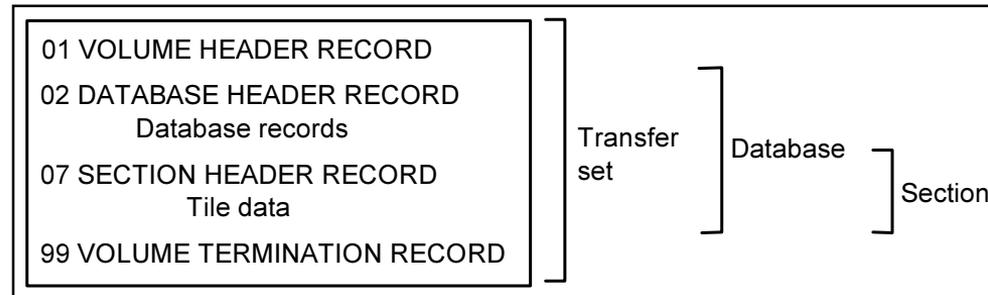

Version management

Product copyright

The copyright date is shown in the {COPYRIGHT} field of the Section Header record [SECHREC].

NTF version

The current version is NTF 2 level1 for contours and NTF 2 level 5 for DTMs. Version 2.0 will be supplied until further notice.

The NTF version is indicated by the {NTFVER} field of the Volume Header record [VOLHDREC]. The effective date of the definition of NTF v2.0 in Land-Form PANORAMA is 19920515 and is indicated by the {DDATE} field of the Database Header record [DBHREC].

General

Record size

NTF data is written to the output device in variable length records, with a maximum record length of 80 characters, which includes {CONT_MARK} and {EOR}.

Continuation mark {CONT_MARK}

Continuation records are used where the maximum physical record length of 80 characters does not permit a logical record to be transferred wholly within one physical record. The presence of a continuation record is indicated by the value of the Continuation mark {CONT_MARK}, which immediately precedes the Record terminator {EOR}. The value of {CONT_MARK} is 1 if there is a continuation record present and 0 if there is not.

Record terminator {EOR}

The end of record terminator is the per cent (%) (ASCII 37) character for both formatted and unformatted media.

Transfer set

A transfer set normally equates to a single file except where continuation volumes are used when the transfer set exceeds the capacity of the medium. The data the customer receives is in one or more transfer sets.

Data supply structure

Supply of data on formatted media


Data supplied on 3½ inch floppy disk, UNIX® cartridge or other logically formatted media is not blocked but is written directly to the output device.

The transfer set has one dataset and one section. One or more transfer sets are put onto the medium.

If your order is larger than the capacity of the medium, it is put onto two or more of that medium.

Continuation volumes are only used if a transfer set is larger than the capacity of the medium.

Formatted media (transfer set less than media capacity)

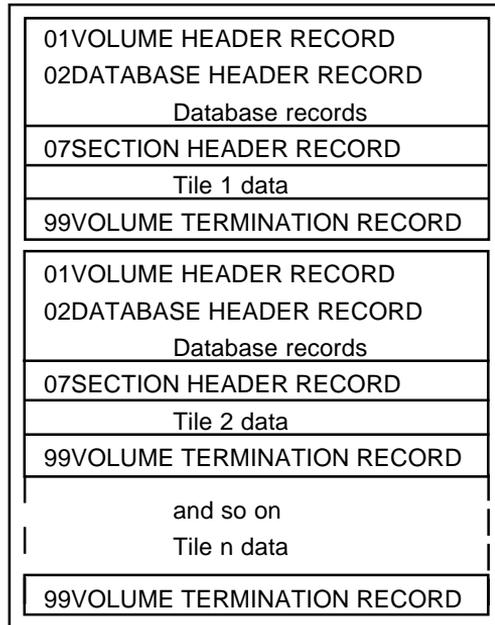

Transfer set structure

Volume records

Each transfer set starts with a compulsory [Volume Header Record](#) [VOLHDREC] and terminates with a compulsory [Volume Terminator Record](#) [VOLTERM].

As a transfer set may span one or more volumes, {VOLNUM} within the [Volume Header Record](#) will indicate which volume in the sequence of volumes within the transfer set it is. Similarly, the [Volume Termination Record](#) may end either a single volume or a complete transfer set. A field similar to the Continuation mark is used to indicate completion or continuation.

Database records

Database records transfer information common to all data and their presentation in the subsequent section(s).

An NTF transfer set will comprise one database. The database commences with a [Database Header Record](#) [DBHREC] which sets up the database. It will be followed by a number of other database records as indicated below.

Database Header Record [DBHREC]

This mandatory record indicates the commencement of a database and gives details of:

- The database name;
- NTF release date;
- Feature Classification table name; and
- Release data which applies to the whole transfer set.

Attribute Description Record [ATTDESC]

These records list and give descriptions of the attributes that can be applied to features within the transfer set. These records are not present in Land-Form PANORAMA DTMs.

Feature Classification Record [FEATCLASS]

These records list and give descriptions of all possible feature codes for the transfer set. These records are not present in Land-Form PANORAMA DTMs.

Data Description Record [DATADESC]

These records list and define new data fields used within new records defined in Data Format records [DATAFMT]. These records are not present in Land-Form PANORAMA contours.

Data Format Record [DATAFMT]

These records list and define new records used to transfer data in the DTM. These records are not present in Land-Form PANORAMA contours.

Section records

The section records contain the data within the map tile. The section starts with the [Section Header Record \[SECHREC\]](#) followed by the section data records.

Section Header Record [SECHREC]

This mandatory record starts a section. It contains information and parameters essential for understanding, interpreting and processing some of the fields within the data. It establishes the unit of measure for x, y and z coordinates, origins and other constants.


Section data records

These contain all the features within the section. The records used within Land-Form PANORAMA contours and DTMs differ.

Structure of Land-Form PANORAMA contours in NTF

Land-Form PANORAMA contours have a vector point and line data structure: within this structure a feature may be a point or a line. Each feature is free-standing; that is its topological relationship to any other feature is not expressed in the data. Features are classified by type and each type is placed as a separate feature code, these are listed on page 3.2.

Figure 6.3: Record configuration for Land-Form PANORAMA contours data in NTF

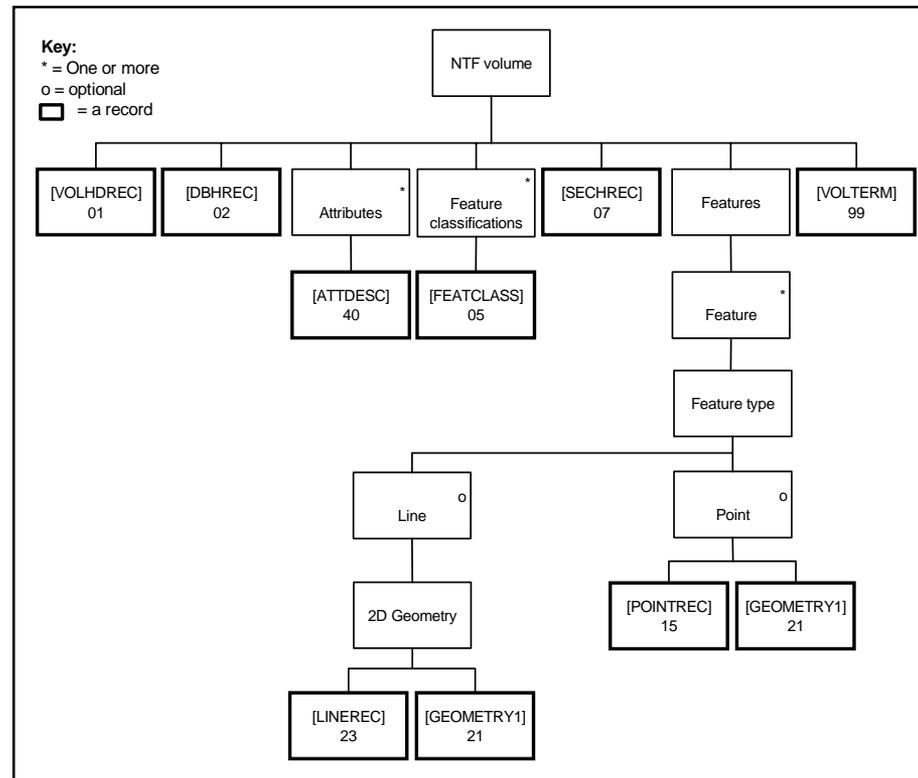

Section data records for contours

These records contain all the features within the section and are listed as they apply to Land-Form PANORAMA contours:

- [Point Record](#) [POINTREC] contains attribute information for point features, including the height data.
- [Line Record](#) [LINEREC] contains attribute information for line features, including the height value.
- Geometry records contain the coordinate position(s) of features. Geometry records for point features will contain one coordinate pair whilst those for line features will contain two or more coordinate pairs.
- [GEOMETRY1] records contain x and y coordinates, are used for all features.
- Geometry continuation records will be used where required.

Coordinate referencing system for contours

Abbreviated NG coordinates are supplied and are given in metres. The coordinates (eastings, northings and height) have a field width of 10 (as indicated in the {XYLEN} and {ZLEN} fields in the [Section Header Record \[SECHREC\]](#)). Leading zeros will be present to complete the field width. Negative values for height may be present; in which case the minus sign appears as the first character.

All eastings and northings are measured from the south-west corner of the 20 km by 20 km square tile.

Full horizontal NG coordinates are calculated by using the {XY_MULT}, {X_ORIG} and {Y_ORIG} values in the [Section Header Record \[SECHREC\]](#) 07 and the conversion formulae below:

$$X = (\{XY_MULT\} \times \{X_COORD\}) + \{X_ORIG\}$$
$$Y = (\{XY_MULT\} \times \{Y_COORD\}) + \{Y_ORIG\}$$

where {X_ORIG} and {Y_ORIG} are additive constants, always added to {X_COORD} and {Y_COORD}, respectively, whilst {XY_MULT} is a multiplication factor applied to the coordinates before the addition of {X_ORIG} and {Y_ORIG}.

In a similar manner, using the {Z_MULT} value in the [Section Header Record \[SECHREC\]](#) 07, heights may be expressed in metres above datum using the following conversion formula:

$$Z = \{Z_MULT\} \times \{VALUE\}$$

Structure of Land-Form PANORAMA DTMs in NTF

The overall structure of a Land-Form PANORAMA DTM data file in NTF, and of the transfer set(s) contained within it, is the same as described in [chapter 3](#).

Unlike Land-Form PANORAMA contours, there are no point or line features supplied for DTMs. Instead, the 20 km by 20 km tile is equally divided by a 50 metre grid and the heights are represented as values at the intersections of this grid.

Record configuration for Land-Form PANORAMA DTM data in NTF

Database records for DTMs

Following the mandatory [Database Header Record](#) [DBHREC], two types of database record are used to define section data records used within the section records part of the file:

- [Data Description Record](#) [DATADESC]
These records list and define new data fields used within new records defined in Data Format records [DATAFMT].
- [Data Format Record](#) [DATAFMT]
These records list and define new records used to transfer data in the DTM.

Section records for DTMs

Following the mandatory [Section Header Record](#) [SECHREC], two types of section record, defined in the database records part of the file, are used to transfer the height information:

- [Grid Header Record](#) [GRIDHREC]
This record describes the 50 metre grid structure.
- [Grid Data Record](#) [GRIDREC]
Each Grid Data record gives the 401 height values (reading south to north) for one column of the grid. The first Grid Data record in the file describes the westernmost column, that is the western edge of the tile. Each subsequent record details the next column eastwards until the 401st and final record lists the height values for the eastern edge of the tile.

Coordinate reference system for DTMs

Abbreviated NG coordinates are supplied and are given in metres. The height coordinate has a field width of four, as indicated in the {ZLEN} field in the [Section Header Record](#) [SECHREC], not the NTF default width of 10. Leading zeros will be present to complete the field width. Negative values for height may be present; in which case the minus sign appears as the first character.

The [Grid Header Record](#) contains the horizontal coordinates of the origin of the DTM.

The Grid Data records contain no horizontal coordinates. Instead, the horizontal position of an individual height value may be calculated from the field {GRID_ID} and the position of the height within the record.

The height above Ordnance Survey datum, or specified datum, in metres of a height value may be calculated by using the {Z_MULT} value in the [Section Header Record](#) [SECHREC] using the following conversion formula:

$$Z = \{Z_MULT\} \times \{GRIDVAL\}$$

Chapter 7 Record structures for the transfer of Land-Form PANORAMA in NTF

NTF record list for Land-Form PANORAMA contours

This list comprises the valid record types used in the NTF v2.0 Level 1 transfer set for Land-Form PANORAMA contour data.

Descriptor	Description	Record name
00	Continuation Record – continues a logical record when the physical limit of 80 characters for other record types is exceeded.	[CONTREC]
01	Volume Header Record – defines the donor and data type.	[VOLHDREC]
02	Database Header Record – transfers data about the database.	[DBHREC]
05	Feature Classification Record – defines data classifications (feature codes).	[FEATCLASS]
07	Section Header Record – coordinate and structure types, unit scale, factors, and so on.	[SECHREC]
15	Point Record – identifies the definition of node points.	[POINTREC]
21	Two-dimensional Geometry Record – defines the two-dimensional geometry for a link or node.	[GEOMETRY1]
23	Line Record – identifies the definition of a link.	[LINEREC]
40	Attribute Description Record – defines attribute descriptions and their fields.	[ATTDESC]
99	Volume Terminator Record – defines the end of the transfer set.	[VOLTERM]

Database Header Record [DBHREC] 02

Field	Position	Format	Value example	Description
REC_DESC	01:02	A2	02	
DBNAME	03:22	A20	OS_LANDRANGER_CONT<2S>	Database name indicating PANORAMA contours.
DDNAME	23:42	A20	DEFAULT_02.00<7S>	Standard NTF data dictionary name.
DDATE	43:50	D8	19920515	Date of standard data dictionary.
DDBASE	51:70	A20	<20S>	Not used.
DDBDATE	71:78	D8	00000000	Not used.
CONT_MARK	79:79	I1	1	Continuation record follows.
EOR	80:80	A1	%	Record terminator.

Continuation of Database Header Record

Field	Position	Format	Value example	Description
REC_DESC	01:02	A2	00	
FCNAME	03:22	A20	<20S>	Not used.
FCDATE	23:30	D8	000000000	Not used.
DQNAME	31:50	A20	<20S>	Not used.
DQDATE	51:58	D8	00000000	Not used.
DATA_MODEL	59:60	I2	00	Data model type – undefined.
CONT_MARK	61:61	I1	0	No continuation record.
EOR	62:62	A1	%	Record terminator.

Record example:

```
02OS_LANDRANGER_CONT  DEFAULT_02.00          19920515          000000001%
00                      00000000          000000000000%
```

1		2		3		4		5		6		7		8					
1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0

Template

Feature Classification Record [FEATCLASS] 05

Field	Position	Format	Value example	Description
REC_DESC	01:02	A2	05	
FEAT_CODE	03:06	A4	0200	Feature code (see the feature code list on page 3.2)
CODE_COM	07:16	A10	<10S>	Not used.
STCLASS	17:36	A20	<20S>	Not used.
FEATDES	37:*	A*	Spotheights	Feature description.
DIVIDER	*.*	A1	\	Divider used to terminate variable length text fields.
CONT_MARK	*.*	I1	0	No continuation record.
EOR	*.*	A1	%	Record terminator.

Note: * = variable integer.

Record example:

```

050200          Spotheights\0%
050201          Contours\0%
050202          Lakes\0%
050203          Breakline\0%
050204          Coastline\0%
050205          Ridgelines\0%
050207          Formlines\0%
    
```

	1		2		3		4		5		6		7		8				
1	2	3	4	5	6	7	8	9	0	1	2	3	4	5	6	7	8	9	0

Template

Section Header Record [SECHREC] 07

Field	Position	Format	Value example	Description
REC_DESC	01:02	A2	07	
SECT_REF	03:12	A10	SS68<6S>	PANORAMA sheet number.
COORD_TYP	13:13	I1	2	Rectangular coordinates.
STRUC_TYP	14:14	I1	1	Vector data.
XYLEN	15:19	I5	00000	Default length of 10 characters for X and Y coordinates.
XY_UNIT	20:20	I1	2	Metres.
XY_MULT	21:30	R10,3	0000001000	Multiply X and Y coordinates by 1.000.
ZLEN	31:35	I5	00000	Default length of 10 characters for Z coordinates.
Z_UNIT	36:36	I1	2	Metres.
Z_MULT	37:46	R10,3	0000001000	Multiply Z coordinates by 1.000.
X_ORIG	47:56	I10	0000260000	NG eastings of south-west corner of tile.
Y_ORIG	57:66	I10	0000180000	NG northings of south-west corner of tile.
Z_DATUM	67:76	I10	0000000000	Defines which datum is used for height.
CONT_MARK	77:77	I1	1	Continuation record follows.
EOR	78:78	A1	%	Record terminator.

Continuation of Section Header Record

Field	Position	Format	Value example	Description
REC_DESC	01:02	A2	00	
XMIN	03:12	I10	0000000000	Abbreviated eastings of south-west corner of tile.
YMIN	13:22	I10	0000000000	Abbreviated northings of south-west corner of tile.
XMAX	23:32	I10	0000020000	Abbreviated eastings of north-east corner of tile.
YMAX	33:42	I10	0000020000	Abbreviated northings of north-east corner of tile.
XY_ACC	43:47	R5,2	00000	Not used.
Z_ACC	48:52	R5,2	00500	Statement of vertical accuracy: 5 metres.
SURV_DATE	53:60	D8	19851008	Nominal date of survey: yyyyymmdd.
LAST_AMND	61:68	D8	19931101	Date of last amendment: yyyyymmdd.
COPYRIGHT	69:76	D8	19931101	Copyright date: yyyyymmdd.
CONT_MARK	77:77	I1	0	No continuation record.
EOR	78:78	A1	%	Record terminator.

Point Record [POINTREC] 15

Field	Position	Format	Value example	Description
REC_DESC	01:02	A2	15	
POINT_ID	03:08	I6	000001	Feature serial number.
VAL_TYPE	09:10	A2	HT	Attribute mnemonic.
VALUE	11:16	A6	000258	Value of HT (in metres).
FEAT_CODE	17:20	A4	0200	Feature code.
CONT_MARK	21:21	I1	0	No continuation record.
EOR	22:22	A1	%	Record terminator.

Line Record [LINEREC] 23

Field	Position	Format	Value example	Description
REC_DESC	01:02	A2	23	
LINE_ID	03:08	I6	000103	Feature serial number.
VAL_TYPE	09:10	A2	HT	Attribute mnemonic.
VALUE	11:16	A6	000040	Value of HT (in metres).
FEAT_CODE	17:20	A4	0201	Feature code.
CONT_MARK	21:21	I1	0	No continuation record.
EOR	22.22	A1	%	Record terminator.

Record example:

23000015HT00001702020%

	1	2	3	4	5	6	7	8
1	2	3	4	5	6	7	8	9
0	1	2	3	4	5	6	7	8
9	0	1	2	3	4	5	6	7
8	9	0	1	2	3	4	5	6
7	8	9	0	1	2	3	4	5
6	7	8	9	0	1	2	3	4
5	6	7	8	9	0	1	2	3
4	5	6	7	8	9	0	1	2
3	4	5	6	7	8	9	0	1
2	3	4	5	6	7	8	9	0
1	2	3	4	5	6	7	8	9
0	1	2	3	4	5	6	7	8

Template

Attribute Description record [ATTDESC] 40

Field	Position	Format	Value example	Description
REC_DESC	01:02	A2	40	
VAL_TYPE	03:04	A2	HT	Attribute mnemonic, for example, height.
FWIDTH	05:07	I3	006	Field width of attribute value.
FINTER	08:12	A5	I6<3S>	Interpretation of field, for example, I6.
ATT_NAME	13:*	A*	HEIGHT	Name given to attribute.
DIVIDER	*.*	A1	\	Divider used to terminate variable length text fields.
FDESC	*.*	A*	CONTOUR VALUE	Textual description of attribute.
DIVIDER	*.*	A1	\	Divider used to terminate variable length text fields.
CONT_MARK	*.*	I1	0	No continuation record.
EOR	*.*	A1	%	Record terminator.

Volume Terminator record [VOLTERM] 99

Field	Position	Format	Value example	Description
REC_DESC	01:02	A2	99	
FREE_TEXT	03:*	A*	End of Transfer Set	See note below.
CONT_VOL	*:*	I1	0 or 1	No further volumes continuation volume.
EOR	*:*	A1	%	Record terminator.

Notes:

If there are further volume(s) to follow then the FREE_TEXT field comprises the following message:

'End Of Volume (nn). Transfer Set Continues On Volume (nn+1)'

If there are no further volumes then the FREE_TEXT field will read:

'End Of Transfer Set'

* = variable integer.

Record examples:

99End Of Volume 01 Transfer Set Continues On Volume 021%

1	2	3	4	5	6	7	8
1	2	3	4	5	6	7	8
9	0	1	2	3	4	5	6
7	8	9	0	1	2	3	4
5	6	7	8	9	0	1	2
3	4	5	6	7	8	9	0
1	2	3	4	5	6	7	8
9	0	1	2	3	4	5	6
7	8	9	0	1	2	3	4
5	6	7	8	9	0	1	2
3	4	5	6	7	8	9	0
1	2	3	4	5	6	7	8
9	0	1	2	3	4	5	6
7	8	9	0	1	2	3	4
5	6	7	8	9	0	1	2
3	4	5	6	7	8	9	0
1	2	3	4	5	6	7	8
9	0	1	2	3	4	5	6
7	8	9	0	1	2	3	4
5	6	7	8	9	0	1	2
3	4	5	6	7	8	9	0
1	2	3	4	5	6	7	8
9	0	1	2	3	4	5	6
7	8	9	0	1	2	3	4
5	6	7	8	9	0	1	2
3	4	5	6	7	8	9	0
1	2	3	4	5	6	7	8
9	0	1	2	3	4	5	6
7	8	9	0	1	2	3	4
5	6	7	8	9	0	1	2
3	4	5	6	7	8	9	0
1	2	3	4	5	6	7	8
9	0	1	2	3	4	5	6
7	8	9	0	1	2	3	4
5	6	7	8	9	0	1	2
3	4	5	6	7	8	9	0
1	2	3	4	5	6	7	8
9	0	1	2	3	4	5	6
7	8	9	0	1	2	3	4
5	6	7	8	9	0	1	2
3	4	5	6	7	8	9	0
1	2	3	4	5	6	7	8
9	0	1	2	3	4	5	6
7	8	9	0	1	2	3	4
5	6	7	8	9	0	1	2
3	4	5	6	7	8	9	0
1	2	3	4	5	6	7	8
9	0	1	2	3	4	5	6
7	8	9	0	1	2	3	4
5	6	7	8	9	0	1	2
3	4	5	6	7	8	9	0
1	2	3	4	5	6	7	8
9	0	1	2	3	4	5	6
7	8	9	0	1	2	3	4
5	6	7	8	9	0	1	2
3	4	5	6	7	8	9	0
1	2	3	4	5	6	7	8
9	0	1	2	3	4	5	6
7	8	9	0	1	2	3	4
5	6	7	8	9	0	1	2
3	4	5	6	7	8	9	0
1	2	3	4	5	6	7	8
9	0	1	2	3	4	5	6
7	8	9	0	1	2	3	4
5	6	7	8	9	0	1	2
3	4	5	6	7	8	9	0
1	2	3	4	5	6	7	8
9	0	1	2	3	4	5	6
7	8	9	0	1	2	3	4
5	6	7	8	9	0	1	2
3	4	5	6	7	8	9	0
1	2	3	4	5	6	7	8
9	0	1	2	3	4	5	6
7	8	9	0	1	2	3	4
5	6	7	8	9	0	1	2
3	4	5	6	7	8	9	0
1	2	3	4	5	6	7	8
9	0	1	2	3	4	5	6
7	8	9	0	1	2	3	4
5	6	7	8	9	0	1	2
3	4	5	6	7	8	9	0
1	2	3	4	5	6	7	8
9	0	1	2	3	4	5	6
7	8	9	0	1	2	3	4
5	6	7	8	9	0	1	2
3	4	5	6	7	8	9	0
1	2	3	4	5	6	7	8
9	0	1	2	3	4	5	6
7	8	9	0	1	2	3	4
5	6	7	8	9	0	1	2
3	4	5	6	7	8	9	0
1	2	3	4	5	6	7	8
9	0	1	2	3	4	5	6
7	8	9	0	1	2	3	4
5	6	7	8	9	0	1	2
3	4	5	6	7	8	9	0
1	2	3	4	5	6	7	8
9	0	1	2	3	4	5	6
7	8	9	0	1	2	3	4
5	6	7	8	9	0	1	2
3	4	5	6	7	8	9	0
1	2	3	4	5	6	7	8
9	0	1	2	3	4	5	6
7	8	9	0	1	2	3	4
5	6	7	8	9	0	1	2
3	4	5	6	7	8	9	0
1	2	3	4	5	6	7	8
9	0	1	2	3	4	5	6
7	8	9	0	1	2	3	4
5	6	7	8	9	0	1	2
3	4	5	6	7	8	9	0
1	2	3	4	5	6	7	8
9	0	1	2	3	4	5	6
7	8	9	0	1	2	3	4
5	6	7	8	9	0	1	2
3	4	5	6	7	8	9	0
1	2	3	4	5	6	7	8
9	0	1	2	3	4	5	6
7	8	9	0	1	2	3	4
5	6	7	8	9	0	1	2
3	4	5	6	7	8	9	0
1	2	3	4	5	6	7	8
9	0	1	2	3	4	5	6
7	8	9	0	1	2	3	4
5	6	7	8	9	0	1	2
3	4	5	6	7	8	9	0
1	2	3	4	5	6	7	8
9	0	1	2	3	4	5	6
7	8	9	0	1	2	3	4
5	6	7	8	9	0	1	2
3	4	5	6	7	8	9	0
1	2	3	4	5	6	7	8
9	0	1	2	3	4	5	6
7	8	9	0	1	2	3	4
5	6	7	8	9	0	1	2
3	4	5	6	7	8	9	0
1	2	3	4	5	6	7	8
9	0	1	2	3	4	5	6
7	8	9	0	1	2	3	4
5	6	7	8	9	0	1	2
3	4	5	6	7	8	9	0
1	2	3	4	5	6	7	8
9	0	1	2	3	4	5	6
7	8	9	0	1	2	3	4
5	6	7	8	9	0	1	2
3	4	5	6	7	8	9	0
1	2	3	4	5	6	7	8
9	0	1	2	3	4	5	6
7	8	9	0	1	2	3	4
5	6	7	8	9	0	1	2
3	4	5	6	7	8	9	0
1	2	3	4	5	6	7	8
9	0	1	2	3	4	5	6
7	8	9	0	1	2	3	4
5	6	7	8	9	0	1	2
3	4	5	6	7	8	9	0
1	2	3	4	5	6	7	8
9	0	1	2	3	4	5	6
7	8	9	0	1	2	3	4
5	6	7	8	9	0	1	2
3	4	5	6	7	8	9	0
1	2	3	4	5	6	7	8
9	0	1	2	3	4	5	6
7	8	9	0	1	2	3	4
5	6	7	8	9	0	1	2
3	4	5	6	7	8	9	0
1	2	3	4	5	6	7	8
9	0	1	2	3	4	5	6
7	8	9	0	1	2	3	4
5	6	7	8	9	0	1	2
3	4	5	6	7	8	9	0
1	2	3	4	5	6	7	8
9	0	1	2	3	4	5	6
7	8	9	0	1	2	3	4
5	6	7	8	9	0	1	2
3	4	5	6	7	8	9	0
1	2	3	4	5	6	7	8
9	0	1	2	3	4	5	6
7	8	9	0	1	2	3	4
5	6	7	8	9	0	1	2
3	4	5	6	7	8	9	0
1	2	3	4	5	6	7	8
9	0	1	2	3	4	5	6
7	8	9	0	1	2	3	4
5	6	7	8	9	0	1	2
3	4	5	6	7	8	9	0
1	2	3	4	5	6	7	8
9	0	1	2	3	4	5	6
7	8	9	0	1	2	3	4
5	6	7	8	9	0	1	2
3	4	5	6	7	8	9	0
1	2	3	4	5	6	7	8
9	0	1	2	3	4	5	6
7	8	9	0	1	2	3	4
5	6	7	8	9	0	1	2
3	4	5	6	7	8	9	0
1	2	3	4	5	6	7	8
9	0	1	2	3	4	5	6
7	8	9	0	1	2	3	4
5	6	7	8	9	0	1	2
3	4	5	6	7	8	9	0
1	2	3	4	5	6	7	8
9	0	1	2	3	4	5	6
7	8	9	0	1	2	3	4
5	6	7	8	9	0	1	2
3	4	5	6	7	8	9	0
1	2	3	4	5	6	7	8
9	0	1	2	3	4		

NTF record list for Land-Form PANORAMA DTMs

This list comprises the valid record types used in the NTF v2.0 Level 5 transfer set for PANORAMA DTMs.

Descriptor	Description	Record name
00	Continuation Record – continues a logical record when the physical limit of 80 characters for other record types is exceeded.	[CONTREC]
01	Volume Header Record – defines the donor and data type.	[VOLHDREC]
02	Database Header Record – transfers data about the database.	[DBHREC]
03	Data Description Record – transfers data dictionary field definitions.	[DATADESC]
04	Data Format Record – transfers data dictionary record definitions.	[DATAFMT]
07	Section Header Record – coordinate and structure types, unit scale, factors, and so on.	[SECHREC]
50	Grid Header Record – defines DTM grid.	[GRIDHREC]
51	Grid Data Record – defines DTM height values for grid.	[GRIDREC]
99	Volume Terminator Record – defines the end of the transfer set.	[VOLTERM]

Volume Header Record [VOLHDREC] 01

Field	Position	Format	Value example	Description
REC_DESC	01:02	A2	01	
DONOR	03:22	A20	ORDNANCE SURVEY<5S>	
RECIPIENT	23:42	A20	<20S>	Not used.
TRANDATE	43:50	D8	19940120	Date of transfer: yyyymmdd.
SERIAL	51:54	I4	0000	Not used.
VOLNUM	55:56	I2	01	Volume number (01 to 99) in transfer set.
NTFLEVEL	57:57	I1	5	NTF level 5.
NTFVER	58:61	R4,2	0200	NTF version 2.00.
NTFOR	62:62	A1	V	Variable length records.
EOR	63:63	A1	% <i>or</i> <S>	Character used for EOR on unformatted media. Default: EOR is % on formatted media.
DIVIDER	64:64	A1	\	Divider used to terminate variable length text fields.
CONT_MARK	65:65	I1	0	No continuation record.
EOR	66:66	A1	%	Record terminator.

Database Header Record [DBHREC] 02

Field	Position	Format	Value example	Description
REC_DESC	01:02	A2	02	
DBNAME	03:22	A20	OS_LANDRANGER_DTM<3S>	Database name indicating PANORAMA DTM.
DDNAME	23:42	A20	DEFAULT_2.00<8S>	Standard NTF data dictionary name.
DDATE	43:50	D8	19920515	Date of standard data dictionary.
DDBASE	51:70	A20	<20S>	Not used.
DDBDATE	71:78	D8	00000000	Not used.
CONT_MARK	79:79	I1	1	Continuation record follows.
EOR	80:80	A1	%	Record terminator.

Continuation of Database Header record

Field	Position	Format	Value example	Description
REC_DESC	01:02	A2	00	
FCNAME	03:22	A20	<20S>	Not used.
FCDATE	23:30	D8	00000000	Not used.
DQNAME	31:50	A20	<20S>	Not used.
DQDATE	51:58	D8	00000000	Not used.
DATA_MODEL	59:60	I2	00	Data model type – undefined.
CONT_MARK	61:61	I1	0	No continuation record.
EOR	62:62	A1	%	Record terminator.

Data Description Record [DATADESC] 03

Field	Position	Format	Value example	Description
REC_DESC	01:02	A2	03	
FIELD_NAME	03:12	A10	GRID_ID	Name of field being defined.
FWIDTH	13:15	I3	010	Width of field being defined.
FINTER	16:20	A5	I10<2S>	Format description if fixed, A* if variable.
FDESC	21:*	A*	GRID IDENTITY	Textual description of field.
DIVIDER	*.*	A1	\	Divider used to terminate variable length text fields.
NO_DATA	*.*	A*	<10S>	Field value when no data available. {FWIDTH} wide.
DIVIDER	*.*	A1	\	Divider used to terminate variable length text fields.
RANGE_MIN	*.*	*.*	<10S>	Minimum value for data. {FWIDTH} wide.
DIVIDER	*.*	A1	\	Divider used to terminate variable length text fields.
RANGE_MAX	*.*	A*	<10S>	Maximum value for data. {FWIDTH} wide.
DIVIDER	*.*	A1	\	Divider used to terminate variable length text fields.
UNITS	*.*	A2	<2S>	Not used.
CONT_MARK	*.*	I1	0	No continuation record.
EOR	*.*	A1	%	Record terminator.

Note: * = variable integer.

Data Format Record [DATAFMT] 04

Field	Position	Format	Value example	Description
REC_DESC	01:02	A2	04	
REC_TYPE	03:04	A2	50	{REC_DESC} of record being defined.
REC_NAME	05:14	A10	GRIDHREC<2S>	Name of record being defined.
NUM_FIELD	15:16	I2	29	Number of fields in the record.
FIELD_NAME	*.*	A10	GRID_ID,3S>	Corresponds to entry in [DATADESC] or BS 7567.
FUSE	*.*	A1	<i>c or o</i>	Use of field (c = compulsory, o = optional).
CONT_MARK	*.*	I1	1 <i>or 0</i>	Continuation record follows or no continuation record.
EOR	*.*	A1	%	Record terminator.

Notes:

The group of fields {FIELD_NAME} and {FUSE} may repeat to end of physical record and through one or more continuation records {NUM_FIELD} times.

The use of brackets within this record around any {FIELD_NAME} and {FUSE} entries indicates that the field or group of fields may repeat one or more times.

Section Header Record [SECHREC] 07

Field	Position	Format	Value example	Description
REC_DESC	01:02	A2	07	
SECT_REF	03:12	A10	SS68<6S>	PANORAMA sheet number.
COORD_TYP	13:13	I1	2	Rectangular.
STRUC_TYP	14:14	I1	1	Vector.
XYLEN	15:19	I5	00000	Default length of 10 characters for X, Y coordinates. Not used in Land-Form PANORAMA DTM, see note.
XY_UNIT	20:20	I1	2	Metres.
XY_MULT	21:30	R10,3	0000001000	Multiply X and Y coordinates by 1.000.
ZLEN	31:35	I5	00000	Default length of 10 characters for Z coordinates.
Z_UNIT	36:36	I1	2	Metres.
Z_MULT	37:46	R10,3	0000001000	Multiply Z coordinates by 1.000.
X_ORIG	47:56	I10	0000260000	X coordinate of south-west corner.
Y_ORIG	57:66	I10	0000180000	Y coordinate of south-west corner.
Z_DATUM	67:76	I10	0000000000	Defines which datum is used for heights.
CONT_MARK	77:77	I1	1	Continuation record follows.
EOR	78:78	A1	%	Record terminator.

Continuation of Section Header record

Field	Position	Format	Value example	Description
REC_DESC	01:02	A2	00	
XMIN	03:12	I10	0000000000	Abbreviated eastings of south-west corner of tile.
YMIN	13:22	I10	0000000000	Abbreviated northings of south-west corner of tile.
XMAX	23:32	I10	0000020000	Abbreviated eastings of north-east corner of tile.
YMAX	33:42	I10	0000020000	Abbreviated northings of north-east corner of tile.
XY_ACC	43:47	R5,2	00000	Not used.
Z_ACC	48:52	R5,2	00500	Statement of vertical accuracy (5 metres).
SURV_DATE	53:60	D8	19850901	Nominal date of survey: yyyyymmdd.
LAST_AMND	61:68	D8	19850901	Date of last amendment: yyyyymmdd.
COPYRIGHT	69:76	D8	19850901	Copyright date: yyyyymmdd.
CONT_MARK	77:77	I1	0	No continuation record.
EOR	78:78	A1	%	Record terminator

Notes:

The default length of 10 characters will in practice be overwritten by the redefinition of the {X_COORD}, {Y_COORD} and {Z_COORD} fields to a six character field in a [DATADESC] 03 record.

The heights at the intersections of the grid are four character fields defined as {GRIDVAL} in a [DATADESC] 03 record. GRIDVAL is defined as an I4 field in the 03 record.

Grid Header Record [GRIDHREC] 50

Field	Position	Format	Value example	Description
REC_DESC	01:02	A2	50	
GRID_ID	03:12	I10	0002600180	Grid identity (based on grid origin).
N_COLUMNS	13:16	I4	0401	Number of columns in DTM.
N_ROWS	17:20	I4	0401	Number of rows in DTM.
N_PLANES	21:24	I4	0001	Number of planes in DTM.
X_COORD	25:34	I10	0000260000	Easting of grid corner.
Y_COORD	35:44	I10	0000180000	Northing of grid corner.
Z_COORD	45:30	I6	000000	Height of grid corner.
X_COORD	51:60	I10	0000280000	Easting of grid corner.
Y_COORD	61:70	I10	0000180000	Northing of grid corner.
Z_COORD	71:76	I6	000000	Height of grid corner.
CONT_MARK	77:77	I1	1	Continuation record follows.
EOR	78:78	A1	%	Record terminator.

Continuation of Grid Header Record (repeated three times)

Field	Position	Format	Value example	Description
REC_DESC	01:02	A2	00	
X_COORD	03:12	I10	0000280000	Easting of grid corner.
Y_COORD	13:22	I10	0000200000	Northing of grid corner.
Z_COORD	23:28	I6	000000	Height of grid corner.
X_COORD	29:39	I10	0000260000	Easting of grid corner.
Y_COORD	39:49	I10	0000200000	Northing of grid corner.
Z_COORD	49:54	I6	000000	Height of grid corner.
CONT_MARK	55:55	I1	0 or 1	No continuation record or continuation record follows.
EOR	56:56	A1	%	Record terminator.

Note: This record allows the definition of a three-dimensional grid showing the lowermost and uppermost planes. In practice, there is only one plane and the grid corner values of each are identical.

Grid Data Record [GRIDREC] 51

Field	Position	Format	Value example	Description
REC_DESC	01:02	A2	51	
GRID_ID	03:12	I10	0002600180	Grid identity (based on grid origin).
SURVEY	13:19	A7	0850901	Method and date of survey.
CHANGE	20:26	A7	0000000	Type and date of change.
COL_START	27:30	I4	0001	First column in [GRIDREC].
COL_END	31:34	I4	0001	Last column in [GRIDREC].
ROW_START	35:38	I4	0001	First row in [GRIDREC].
ROW_END	39:42	I4	0401	Last row in [GRIDREC].
PLA_START	43:46	I4	0001	First plane in [GRIDREC].
PLA_END	47:50	I4	0001	Last plane in [GRIDREC].
COL_INV	51:51	I1	0	Column inversion: 0 = false.
ROW_INV	52:52	I1	0	Row inversion: 0 = false.
PLA_INV	53:53	I1	0	Plane inversion: 0 = false.
ORDER	54:34	I1	1	Order in which the data is organised: 1 = column, row, plane.
INTERPRET	55:55	I1	1	Interpretation of data: 1 = numeric.
V_OFFSET	56:65	I10	0000000000	Additive constant to be added to values after scaling.
V_SCALE	66:75	R10,3	0000001000	Scaling factor for data values, that is, 1.000.
CONT_MARK	76:76	I1	1	Continuation record follows.
EOR	77:77	A1	%	Record terminator.

Continuation of Grid Data Record

Field	Position	Format	Value example	Description
REC_DESC	01:02	A2	00	
N_GRIDVAL	03:10	I8	00000401	Number of values in [GRIDREC] – always 401.
CONT_MARK	11:11	I1	1	Continuation record follows.
EOR	12:12	A1	%	Record terminator.

There follow 21 continuation records like this:

Field	Position	Format	Value example	Description
REC_DESC	01:02	A2	00	
GRIDVAL	*.*	I4	0061	Height at grid intersection (repeated 19 times).
CONT_MARK	79:79	I1	1	Continuation record follows.
EOR	80:80	A1	%	Record terminator.

and a final continuation record like this:

Field	Position	Format	Value example	Description
REC_DESC	01:02	A2	00	
GRIDVAL	*.*	I4	0022	Height at grid intersection (repeated twice).
CONT_MARK	11:11	I1	0	No continuation record.
EOR	12:12	A1	%	Record terminator.

Volume Terminator Record [VOLTERM] 99

Field	Position	Format	Value example	Description
REC_DESC	01:02	A2	99	
FREE_TEXT	03:*	A*	End of Transfer Set	See note below.
CONT_VOL	*:*	I1	0 <i>or</i> 1	No continuation volumes or continuation volume.
EOR	*:*	A1	%	Record terminator.

Notes:

If there are further volume(s) to follow then the FREE_TEXT field comprises the following message:

``End Of Volume (nn). Transfer Set Continues On Volume (nn+1)'`

If there are no further volumes then the FREE_TEXT field will read:

``End Of Transfer Set'`

* = variable integer.

Chapter 8 DXF explained

An overview of Land-Form PANORAMA

This chapter describes the representation of Land-Form PANORAMA in Ordnance Survey's implementation of DXF, including the DXF group and section structure.

It is assumed that the reader of this guide is familiar with the sections about DXF in the appropriate AutoCAD manual, published by Autodesk Ltd, Cross Land, Guildford GU1 1UJ, or an equivalent document published by the reader's software supplier if a CAD package other than AutoCAD is to be used.

Structure of Land-Form PANORAMA contours

Land-Form PANORAMA contour data has a vector point and line structure; within this structure a feature may be a point or a line. Each feature is free standing: its topological relationship to any other feature is not expressed in the data.

Features are classified by type and each type is placed in a separate DXF layer.

Line features

A feature is a subjective entity; that is, so long as the constituent lines are of the same description (layer), a feature need not fully describe a logical piece of detail. The extent of a feature is determined by digitising conventions and will not always coincide with the topology.

Each line feature is composed of a string of coordinate pairs (or triples) implicitly joined by straight lines. Vector (point and line) data was originally intended for map production.

Structure of Land-Form PANORAMA DTMs

The DTM tiles in DXF consist of a series of heighted points arranged on a 50 m grid comprising 401 points by 401 points.

Each of these points has full three-dimensional coordinates.

The first point is positioned on the south-west corner of the tile, with further points at 50 m intervals northwards to the northern edge of the tile, creating a column of 401 points. The next column will start on the southern edge of the tile 50 m east of the origin, again progressing in 50 m intervals to the north edge of the tile.

This pattern is repeated until the final point, which falls on the north-east corner of the tile. Therefore, there are a total of 160 801 points on each tile.

Land-Form PANORAMA DXF layers

Generalised feature record representation

The following is a simplified generalisation of the way individual feature records are organised in Ordnance Survey's implementation of DXF:

Point	LAYER	Coordinate triple		
2-D polyline	LAYER	Coordinate triple	Coordinate triple	Height

A 2-D polyline in DXF actually has three dimensions, that is, x, y and z coordinates at each vertex on the line. It is known as a 2-D polyline because its height (z) value does not vary along its length.


Land-Form PANORAMA footnotes

Map footnotes

Each map data file contains a set of map footnotes. This includes data on the source and history of the geometric data (the features) contained in the map data file. The following items are all included in the footnotes and are available for display and plotting from a Land-Form PANORAMA map file:


- Note 1:** Top Margin centrally aligned, 700 ground metres, Layer: G8040571
Ordnance Survey®
- Note 2:** Top Margin centrally aligned, 600 ground metres, Layer: G8040571
Land-Form PANORAMA™ DTM Data
- Note 3:** Lower left margin, 200 ground metres, Layer: G8040571
Translation Date dd Mmmmmmmmm CCYY
- Note 4:** Lower left margin, 200 ground metres, Layer: G8040571
Tile reference number __ __ __ for example NS46
- Note 5:** Lower left margin, 200 ground metres, Layer: G8040571
Reproduced from Ordnance Survey Land-Form PANORAMA™ Data
with the permission of the controller of Her Majesty's Stationary
Office.
© Crown Copyright CCYY
- Note 6:** Lower right margin, 200 ground metres, Layer: G8040571
The derived scale of the product is dependent upon the source data.
- Note 7:** Lower right margin, 200 ground metres, Layer: G8040571
Height given in metres above Newlyn Datum.
- Note 8:** Lower right margin, 200 ground metres, Layer: G8040571
Date of last amendment dd Mmmmmmmmm CCYY
- Note 9:** Lower right margin, 200 ground metres, Layer: G8040571
Product specification OS_LANDRANGER_DTM

Figure 8.1: Layout of footnotes

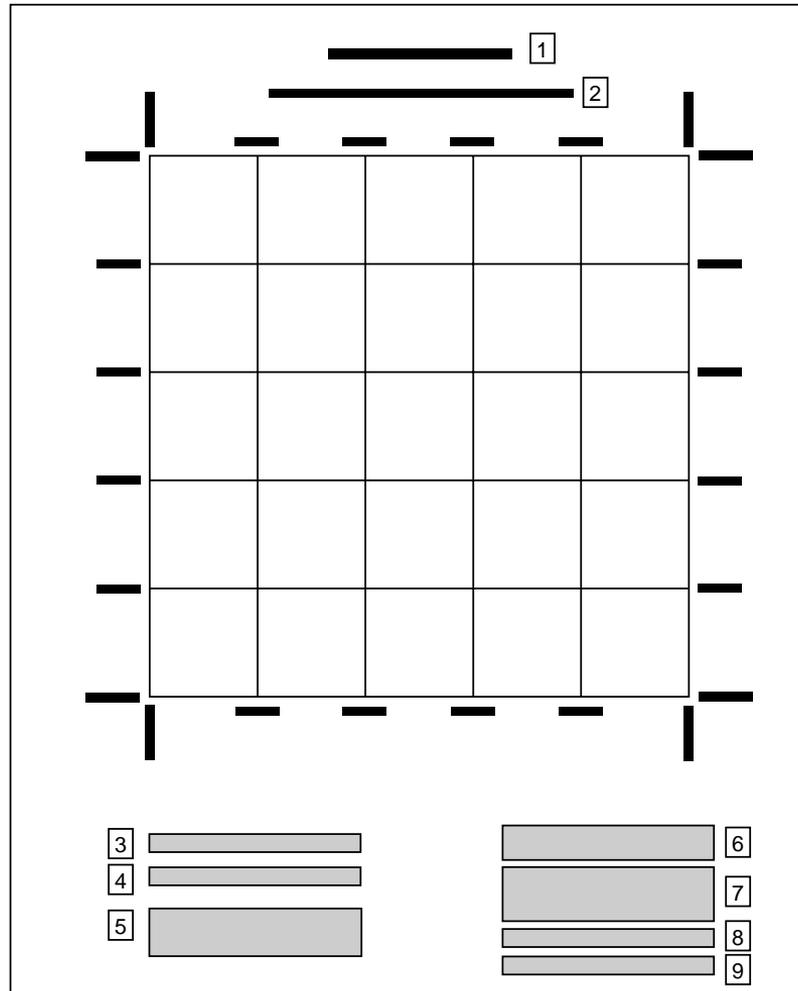

DXF file structure for Land-Form PANORAMA

The DXF file is structured into a number of sections, each of which holds specific information relating to the drawing. The overall organisation of the file is as follows:

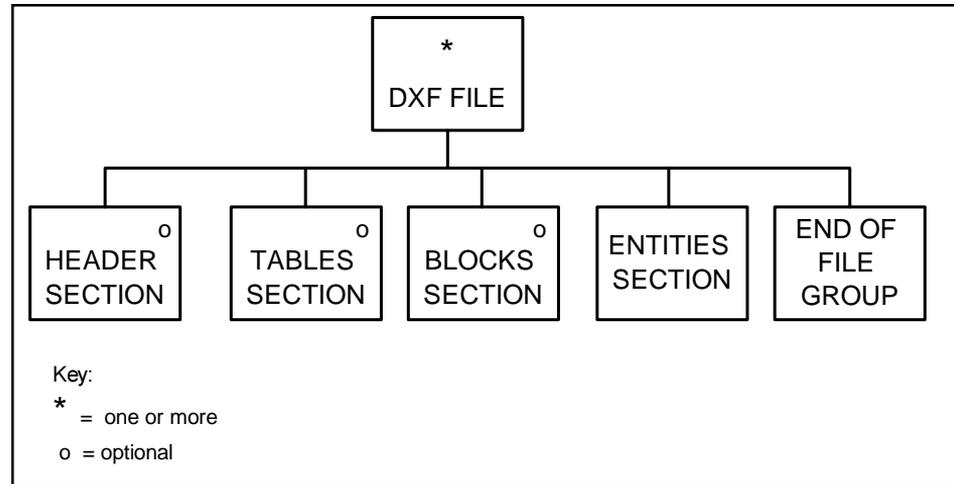

Layers lists

The following are lists of layers that may be included in a Land-Form PANORAMA DXF data file and are shown in numerical order of feature code.

Layer names and descriptions for Land-Form PANORAMA contours in DXF

Layer name	Description	Linetype	Entity	Colour	Symbol
G8040200	Spot heights	CONTINUOUS	INSERT	WHITE	SPOTH
G8040201	Contours	CONTINUOUS	POLYLINE	BROWN	
G8040202	Lakes	CONTINUOUS	POLYLINE	CYAN	
G8040203	Break line	CONTINUOUS	POLYLINE	WHITE	
G8040204	Coastline	CONTINUOUS	POLYLINE	BLUE	
G8040205	Ridgelines	CONTINUOUS	POLYLINE	GREEN	
G8040207	Formlines	CONTINUOUS	POLYLINE	WHITE	
G8040571	Footnotes and grid values	STANDARD	INSERT	WHITE	
G8040572	Grid lines	CONTINUOUS	LINE	WHITE	
G8040573	Grid values	STANDARD	TEXT	WHITE	
G8040575	Default	CONTINUOUS	POLYLINE	WHITE	

Layer names and descriptions for Land-Form PANORAMA DTMs in DXF

Layer name	Description	Linetype	Entity	Colour	Symbol
G8100030	DTM height data	CONTINUOUS	POINT	WHITE	
G8100571	Footnotes and grid values	STANDARD	INSERT	WHITE	
G8100572	Grid lines	CONTINUOUS	LINE/TEXT	WHITE	
G8100573	Grid values	CONTINUOUS	TEXT	WHITE	
G8100575	Default	CONTINUOUS	LINE	WHITE	


Chapter 9 DXF file structure for Land-Form PANORAMA

General

The following pages contain examples of DXF records with explanatory notes alongside.

Header section

A DXF file will commence with a Header Section which will contain general information about the drawing. Each of the groups consists of a variable name and an associated value or values.

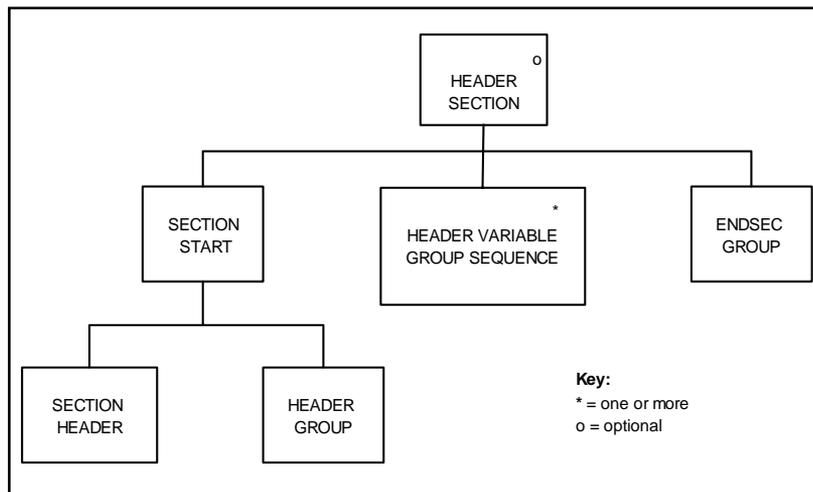

Thus:		
DXF example		Notes
0		
SECTION		
2		
HEADER		
9		
\$ACADVER		AutoCAD drawing database version number
1		
AC1009		This indicates Release 11 or 12
9		
\$EXTMIN		X and Y drawing extents, lower left corner
10		
nnnnnnn.nnn		Minimum eastings, (NG coordinates)
20		
nnnnnnn.nnn		Minimum northings, (NG coordinates)
9		
\$EXTMAX		X and Y drawing extents, upper right corner
10		
nnnnnnn.nnn		Maximum eastings, (NG coordinates)
20		
nnnnnnn.nnn		Maximum northings, (NG coordinates)
9		
\$LIMMIN		X and Y drawing limits, lower left corner
10		
nnnnnn.nnn		X drawing limit, lower left corner, (in the AutoCAD World Coordinate System (WCS))
20		
nnnnnn.nnn		Y drawing limit, lower left corner, (in WCS)
9		
\$LIMMAX		X and Y drawing limits, upper right corner
10		
nnnnnn.nnn		X drawing limit, upper right corner, (in WCS)
20		
nnnnnn.nnn		Y drawing limit, upper right corner, (in WCS)
9		

\$LTSCALE	Global linetype scale
40	
1.00	
9	
\$ATTMODE	Attribute visibility
70	
1	This sets attributes to on when the tile is open
9	
\$FILLMODE	Fill mode <i>on</i> if non-zero
70	
1.000	
9	
\$TEXTSIZE	Default text height
40	
1.000	
9	
\$TEXTSTYLE	Current text style name
7	
STANDARD	
9	
\$CELTYPE	Entity line type name
6	
BYLAYER	
9	
\$CECOLOR	Entity colour number
62	
256	Indicates colour id BYLAYER
9	
\$LUNITS	Units format for coordinates and distances
70	
2	
9	
\$LUPREC	Units precision for coordinates and distances
70	
1	


```
9
$AUPREC          Units precision for angles
70
1
9
$ANGBASE        Angle zero direction
50
0.000
9
$ANGDIR         Angle rotation
70
0               1 = clockwise angles, 0 = counter clockwise angles
9
$PDMODE         Point display mode
70
1
9
$PDSIZE         Point display size
40
0.000
9
$PLINEGEN
70
1
0
ENDSEC         End of section
```

Tables section

The Tables section will follow the Header section and contains definitions of named items. Within Land-Form PANORAMA, it will normally contain three tables:

- The linetype table will contain the definition for the solid line linetype.
- The layer table will contain the layer definitions (and their colours and linetypes) for the layers within the drawing.
- The style table may define the files from which to access symbols and text fonts. Currently, Land-Form PANORAMA contours does not specify any styles.

Level 2

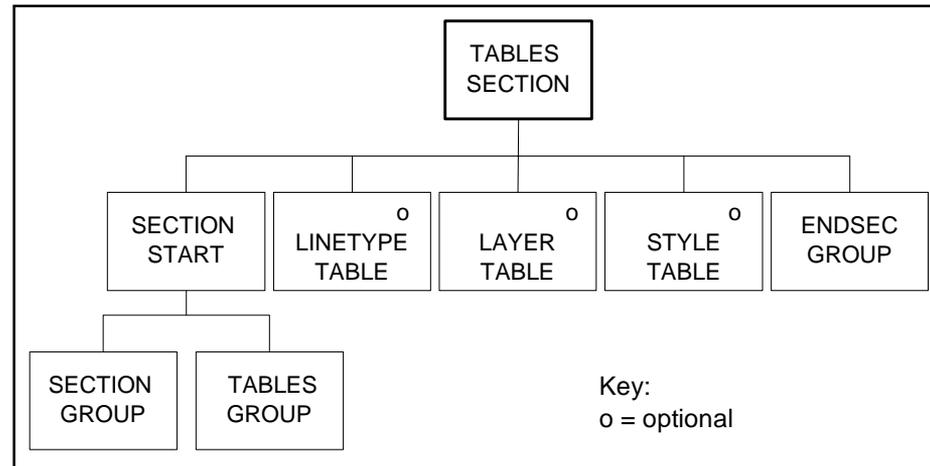


The Tables section will follow the Header section and will contain three tables:

- Linetype table;
- Layer table; and
- Style table.


Linetype table

The Linetype table will contain definitions for the following line type:

- solid line.

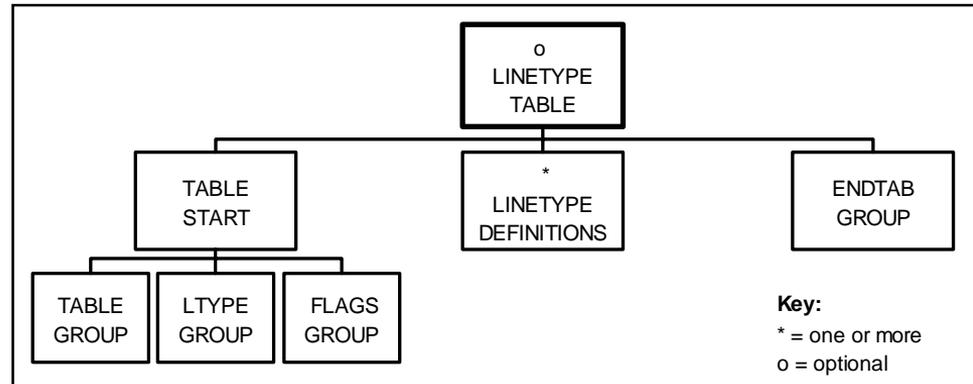


Level 4

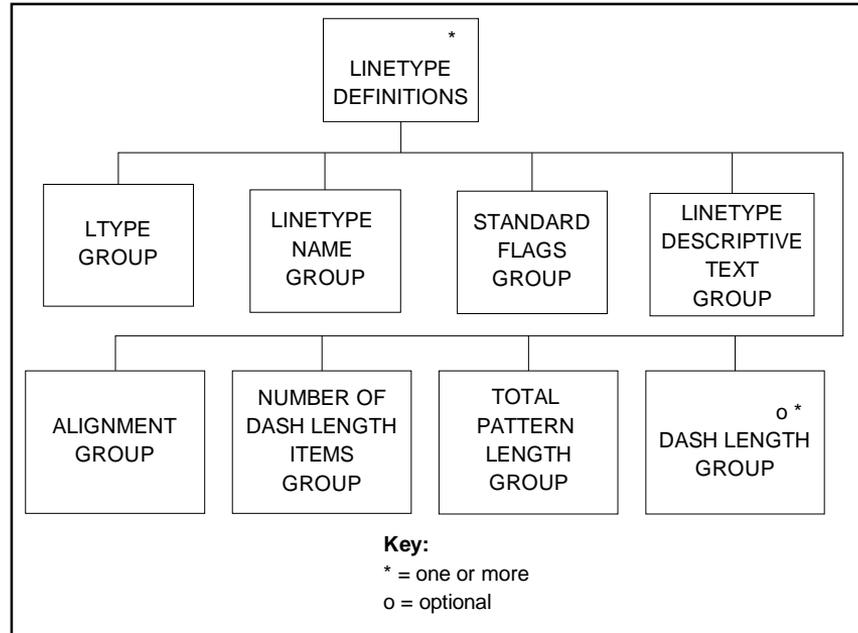

DXF example	Notes
0	
TABLE	Table start
2	
LTYPE	Linetype table
70	
1	Flags group
0	
LTYPE	Linetype definition
2	
CONTINUOUS	Name of linetype
70	
64	Flags group
3	
solid line	Linetype description
72	
65	Alignment
73	
0	Number of dash items
40	
0.0	Pattern length
0	
ENDTAB	End of Linetype table

Layer table


Level 3

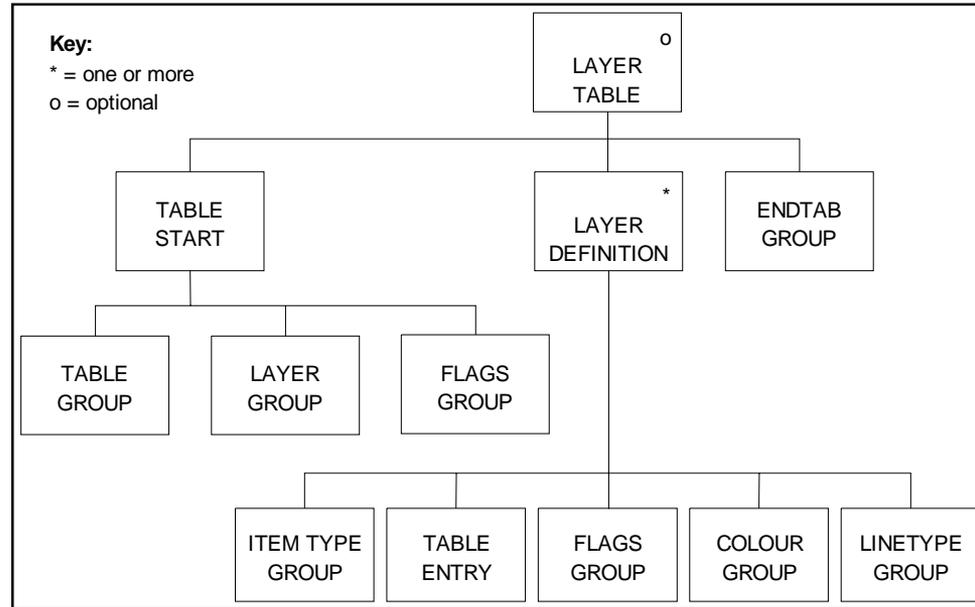


Style table

The Style table is part of the Tables section and defines the files from which to access symbols and text fonts.

Level 3

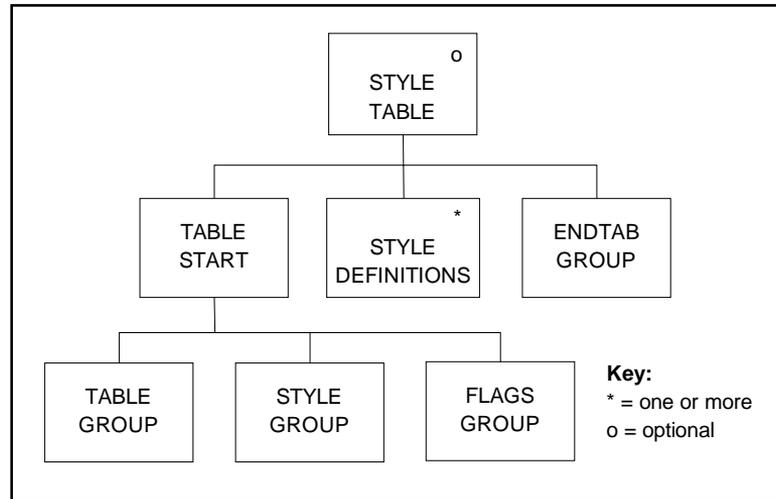

Level 4

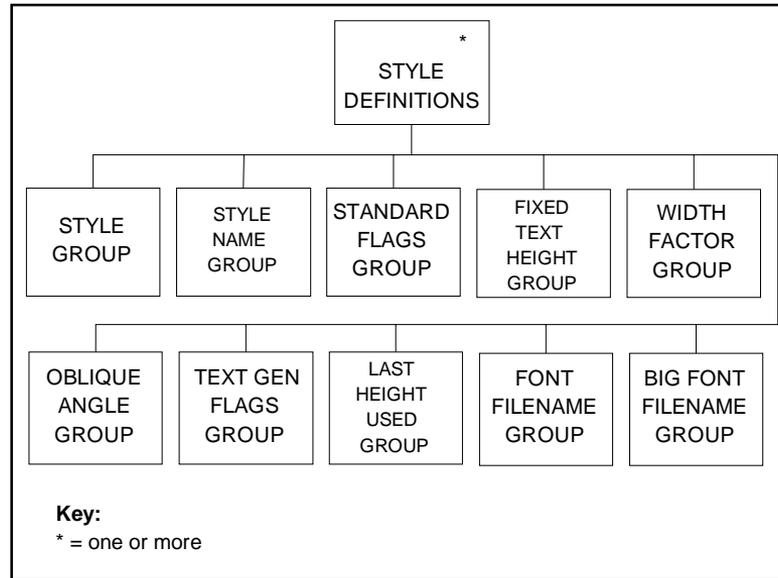

DXF example Notes

```
0
TABLE
2
STYLE
70
    5
0
STYLE
2
STANDARD
70
    64
40
0.0
41
1.0
50
0.0
71
    0
42
1.0
3
SIMPLEX.SHX
4

0
STYLE
2
MONOTEXT
70
    0
40
0.0
```

```
41
1.0
50
0.0
71
  0
42
1.0
3
MONOTXT . SHX
4


0
STYLE
2
MONOTXT
70
  0
40
0.0
41
1.0
50
0.0
71
  0
42
1.0
3
MONOTXT . SHX
4

0
ENDTAB
```


Blocks section

The Blocks section defines the symbols (or blocks) which may appear in the drawing. These can be made up from any number of entities such as polylines.

Level 2

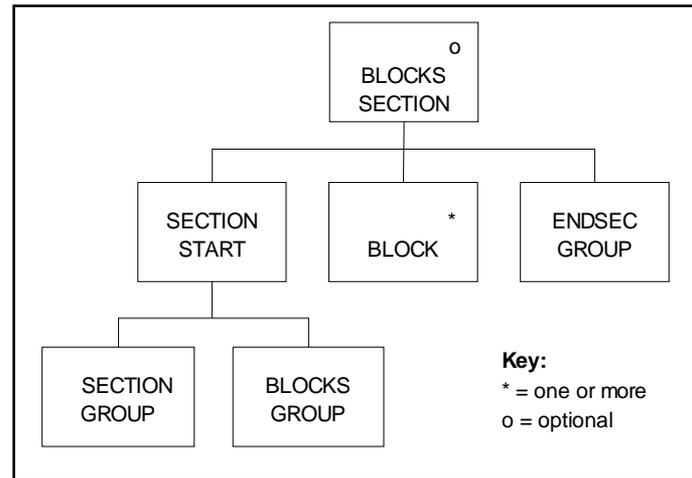

Level 3

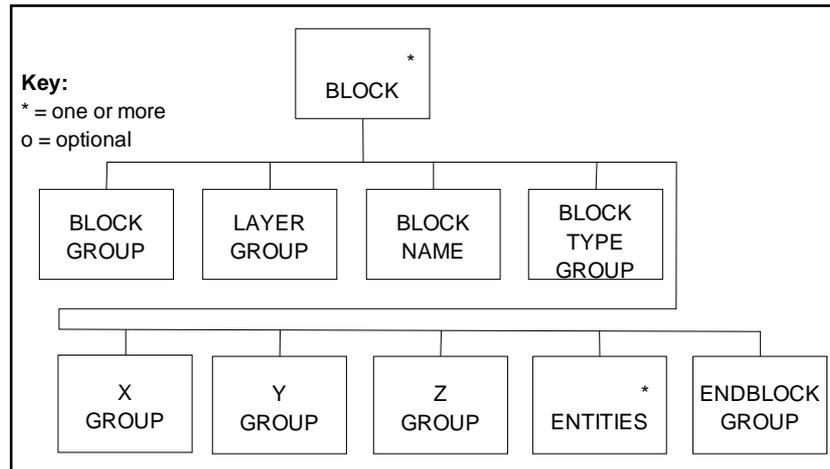

Entities section

The Entities section will contain DXF entities for:

- OS map footnotes data, (INSERT entities);
- Grid and neatline, (TEXT and LINE entities); and
- OS map features, (TEXT, POLYLINE and INSERT entities).

The structure of each different entity is as follows:


- INSERT entities – these consist of:
 - INSERT entity type group (Attribute number: 0)
 - Layer name group (8)
 - Block name group (2)
 - X coordinate group (10)
 - Y coordinate group (20)
 - Z coordinate group (30)
 - X scale factor (41) [optional]
 - Y scale factor (42) [optional]
 - Orientation group (50) [optional if 0]
- LINE entities – these consist of:
 - LINE entity type group (0)
 - Layer name group (8)
 - Start X coordinate group (10)
 - Start Y coordinate group (20)
 - End X coordinate group (11)
 - End Y coordinate group (21)

- POLYLINE entities – these consist of:
 - POLYLINE entity type group (0)
 - Layer name group (8)
 - Vertices follow flag group (66)
 - Polyline elevation (30)
 - Polyline flag group (70) [optional]
 - A number of VERTEX entities [shown below]
 - SEQEND group (0)


- VERTEX entities – these consist of:
 - VERTEX entity type group (0)
 - Layer name group (8)
 - X coordinate group (10)
 - Y coordinate group (20)
 - Z coordinate group (30)

- TEXT entities – these consist of:
 - TEXT entity type group (0)
 - Layer name group (8)
 - X coordinate group (10)
 - Y coordinate group (20)
 - Text height group (40)
 - Text string group (1)
 - Justify type group (72) [optional if 0]
 - Justify type group (73) [optional if 0]
 - Orientation group (50) [optional if 0]
 - Text style group (7) [optional]
 - Align X group (11) [only present if Justify group is present and has a value of 2]
 - Align Y group (21) [only present if Justify group is present and has a value of 2]


Level 2

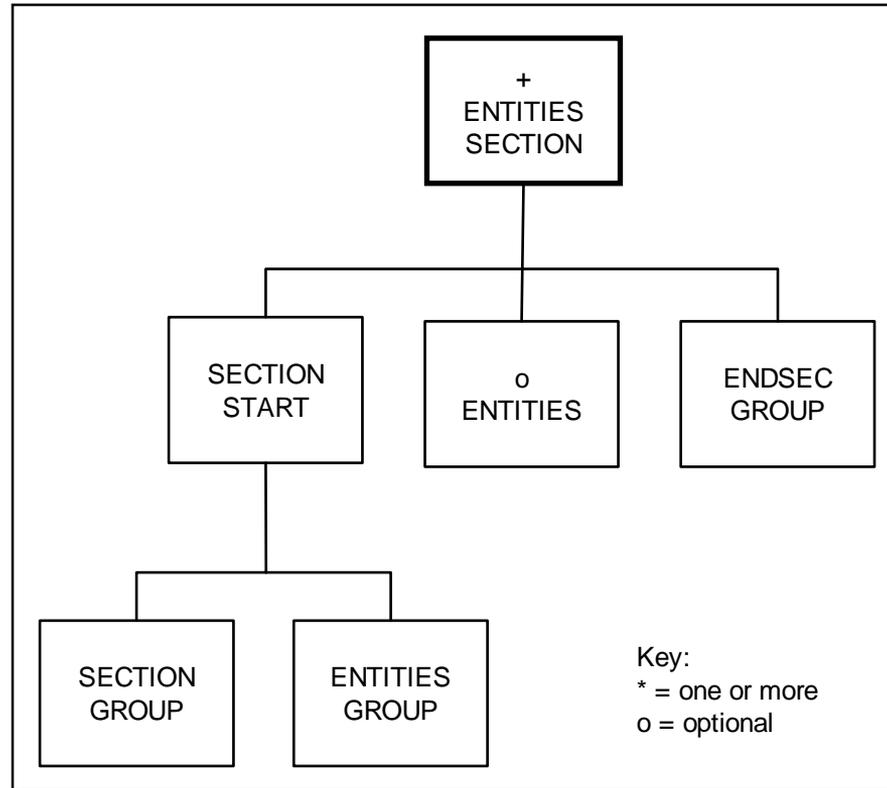


Level 3

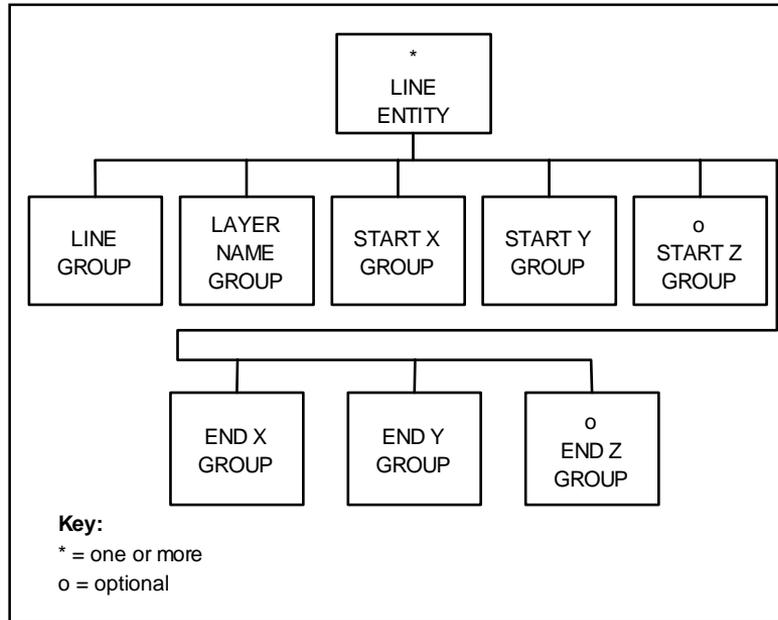


Level 3

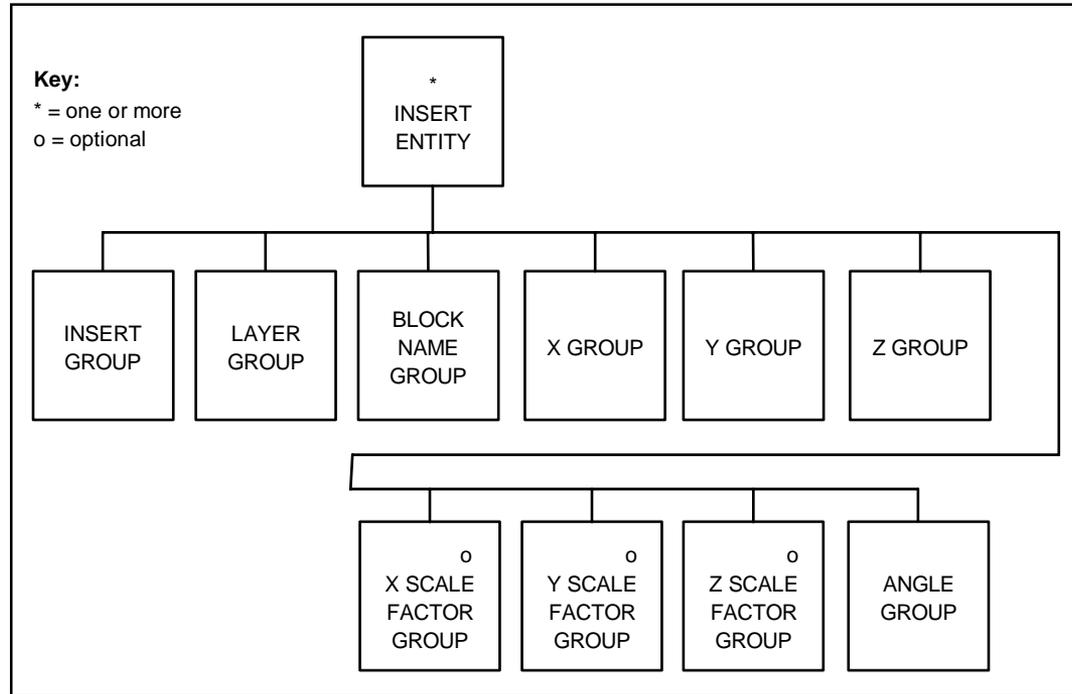

Level 3

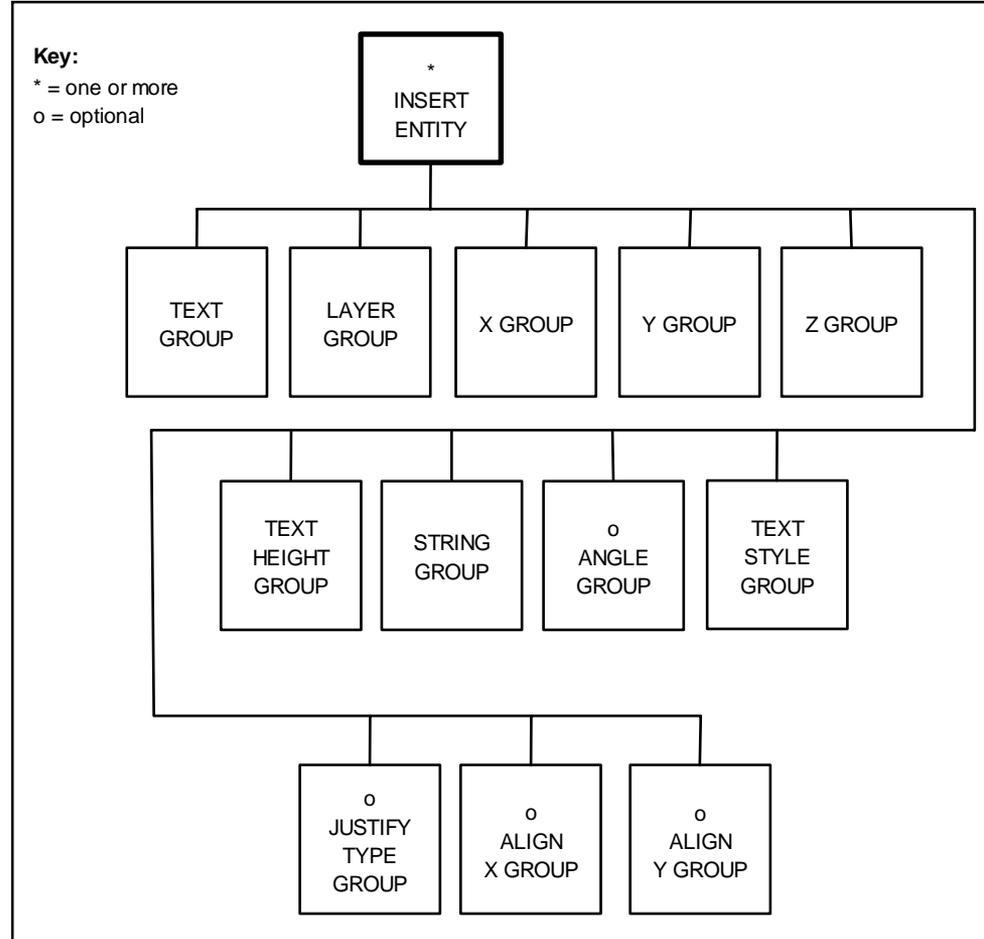

Level 4

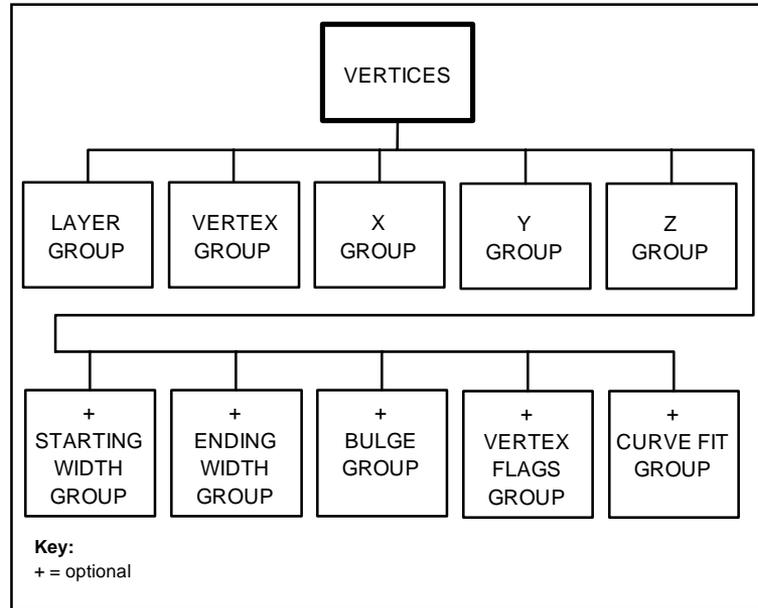

End of file group

This group will end with DXF EOF (end of file) group.

Appendix A Glossary

The following is a list of technical terms used in this user guide, together with a fuller definition.

absolute accuracy

A measure which indicates how closely the coordinates of a point in Ordnance Survey map data agree with the *true* National Grid coordinates of the same point on the ground.

As the true position can never be known exactly, the statistic is quoted relative to the best known position determined by precise survey methods.

absolute coordinates

A coordinate pair or triplet measured directly from the origin of the coordinate system in which it lies and not to any other point in the system.

accuracy

The closeness of the results of observations, computations or estimates to the true values or the values accepted as being true. Accuracy relates to the exactness of the result, and is a measure of the exactness of the operation by which the result is obtained.

air height

A coordinated control point, which can be identified on the ground and also in aerial photos, that is used to provide vertical control.

alphanumeric

Information in character form.

area

A spatial extent defined by circumscribing lines that form a closed perimeter that does not intersect itself.

basic scale

The scale at which the survey is undertaken. For Ordnance Survey mapping, three scales (1:1250 – urban, 1:2500 – urban and rural, 1:10 000 – mountain and moorland) are used.

basic scale file and/or unit tile (sheet)

A grouping of topographic information relating to a specific spatial extent, in the form of a map either held as a data file or realised on paper.

bit

An acronym for binary digit.

byte

A unit of computer storage of binary data usually comprising 8 bits, equivalent to a character. Hence megabyte, one million bytes, and gigabyte, one thousand million bytes.

cartography

The organisation and communication of geographically related information in either graphic or digital form. It can include all stages from data acquisition to presentation and use.

CD-ROM

A data storage medium. A 12 cm disc similar to an audio CD.

character

A distinctive mark; an inscribed letter; one of a set of writing-symbols.

character set

A set of letters, numerals, punctuation marks, mathematical and other symbols. Standard sets have been drawn up such as ANSI, ISO and others.

character string

A one-dimensional array of characters held either in memory or in another storage medium.

coded string data

A type of **vector data** in which the strings of coordinates have been feature coded.

coding

Allocation of a feature code to a feature being created from constituent construction data (points and/or segments); with optional linking to an existing feature of the same **feature code**.

continuation mark

A **logical record** may contain more data than can be held in a single physical record. The **physical record** contains a continuation mark (the penultimate character of the record in NTF) to indicate whether more data is to be found in a continuation record.

continuation record

A specific NTF term. A continuation record is used where space does not allow one **logical record** to be contained wholly within one **physical record**.

coordinate pair

An X and Y value measured with reference to Cartesian axes. In mapping, a coordinate pair normally consists of an easting and a northing.

coordinates

Pairs of numbers expressing horizontal distances along orthogonal axes. Alternatively, triplets of numbers measuring horizontal and vertical distances. Row and column numbers of pixels from raw imagery are not considered coordinates for the purpose of this convention. (See **coordinate pair**.)

copyright

Copyright is a legal property right which enables the creator of an original work to protect it from unauthorised use. Through the *Copyright, Designs and Patents Act 1988*, Crown copyright continues to subsist in all Ordnance Survey products until the end of the period of 50 years from the end of the year in which they were published, and in the case of digital data from the end of the year in which it was extracted from the Ordnance Survey database. Crown copyright is vested in The Controller of Her Majesty's Stationery Office, who has delegated powers to the Director General, Ordnance Survey for the administration of copyright in publications and data, including the determination of rules and terms under which permission for their reproduction is given.

currency

An expression of the up-to-dateness of data.

DAT (digital audiotape)

A storage medium that is increasingly used for data storage. A DAT cartridge is slightly larger than a credit card and contains magnetic tape that can hold from 700 Mb to 2.3 Gb of data.

data

A representation of facts, concepts or instructions in a formalised manner suitable for communication, interpretation or processing.

data capture

The encoding of data. In the context of digital mapping this includes map **digitising**, direct recording by electronic survey instruments, and the encoding of text and attributes by whatever means.

data format

A specification that defines the order in which data is stored or a description of the way data is held in a file or record.

data point

A coordinate pair which defines the position of a point feature, or one of a series of coordinate pairs which defines a line feature.

data quality

Attributes of a dataset which define its suitability for a particular purpose, for example, completeness, positional accuracy, currency, logical structure, and so on.

data structure

The defined logical arrangement of data as used by a system for data management; a representation of a data model in computer form.

data transfer medium

This is the means by which computer files are transferred from one computer to another. Transfer media may be subdivided into communications media and physical media.

data type

This defines the structure of a data item. This in turn determines the range of values it can take and the range of operations that can be applied to it. Integer, real and character string are examples of data type. Some modern programming languages allow user-defined types.

databank

A collection of data in a common location relating to a given set of subjects.

database

An organised, integrated collection of data stored so as to be capable of use by relevant applications with the data being accessed by different logical paths. Theoretically it is application-independent, but in reality it is rarely so.

dataset

An identifiable collection of related data.

density

A measure of the number of units of data held on a stated length of storage surface. For example some magnetic tapes may be recorded at a density of 1 600 bits per inch (bpi). Often referred to as packing density.

derived map

A map which has been produced by reference to other source data, rather than directly from a survey.

digital

Data which is expressed as numbers (digits) in computer readable form is said to be digital.

digital archive

Archival map data stored in digital format.

digital elevation model (DEM)

A generic term describing a digital representation of a topographic surface. The surface elevation values can be represented in various forms, for example by contours, spot heights or breaklines, a regular grid or triangulated irregular network (TIN), and so on. A DEM may also include surface features such as buildings, vegetation, and so on.

digital map

A term used by Ordnance Survey to describe a particular tile of digital map data.

digital map data

The digital data required to represent a map. The data includes not only map detail but also feature header data, map header data and management data.

digital map file

The **digital map data** comprising a **map sheet unit**.

digital terrain image (DTI)

A two-dimensional model representing the topographic surface. Surfaces between contours, or sets of contours, are coloured or shaded as required.

digital terrain model (DTM)

A DEM primarily defining the ground surface. This will normally exclude ground surface features such as buildings, woodland, and so on. *Note: this is a well established term which preceded **DEM** as a generic description.*

digitising

The process of converting analogue (hand drawn) maps and other sources to a computer readable form. This may be point digitising, where points are only recorded when a button is pressed on a cursor, or stream digitising where points are recorded automatically at preset intervals of either distance or time as the cursor is traced along a map feature.

DXF (Drawing Interchange File format)

A proprietary data format, devised by Autodesk, by which digital drawings may be transferred between users of CAD (computer-aided design) systems. DXF has become an industry standard data format and is an option for the transfer of Ordnance Survey Land-Form PANORAMA.

eastings

See [rectangular coordinates](#).

EBCDIC (extended binary coded decimal interchange code)

An 8-bit character encoding scheme.

edgematch

The process of ensuring that data along the adjacent edges of map sheets, or some other unit of storage, matches in both positional and attribute terms.

edit

The process of validating and correcting errors in [digital map data](#).

feature

An item of detail within a digital map which can be represented by either a point, symbol, text or line.

feature classification record

A specific, named NTF record which lists the feature codes in use in the current [database](#).

feature code (FC)

A numeric attribute used in **digital map data** to describe each feature in terms either of the object surveyed or its representation on the map (or both). A feature code is equivalent to a layer in DXF.

feature identifier

A unique code to identify an individual **feature**. (See also **feature serial number**.)

feature serial number (FSN)

A number used as a **feature identifier** usually allocated on a sequential basis. For example, the order in which **features** are digitised.

field

A specified part of a record containing a unit of data, such as the date of **digitising**. The unit of data may be a data element or a data item. In NTF a field is a subdivision of a **physical record**. Every field has a name and a pre-defined interpretation.

font

The style of text character used by a printer or plotter.

formline

A supplementary contour – not corresponding to the normal contour vertical interval – estimated or interpolated from surrounding contours, used in areas where there is insufficient height information to control the creation of a grid **DEM**.

footnotes

Supplementary or explanatory notes pertaining to a map sheet which are normally included below the southern neatline of a printed map and supplied with DXF data.

format

The specified arrangement of data. For example, the layout of a printed document, the arrangement of the parts of a computer instruction, the arrangement of data in a record.

generalisation

The process of abstraction from the real world – through selection, aggregation, simplification and symbolisation – for the purpose of representation in spatial data.

geographical information system (GIS)

A system for capturing, storing, checking, integrating, analysing and displaying data that is spatially referenced to the Earth. This is normally considered to involve a spatially referenced computer database and appropriate applications software.

geographical coordinates

These are coordinates, usually expressed as latitudes and longitudes which define position on the Earth's surface.

geometric data

Data about position within an **absolute** or relative coordinate system.

grid

The planimetric frame of reference, for example, the **National Grid**.

hard copy

A print or plot of output data on paper or some other tangible medium.

header

See **map header**.

kilobyte (Kb)

1 024 bytes; a measure of data storage capacity.

line

A series of connected coordinated points forming a simple feature with homogeneous attribution.

line segment

A vector connecting two coordinated points.

logical record

A logical record contains all the information relating to a data entity, for example, a feature record. A logical record may comprise one or more physical records.

map

A graphical or digital representation of the landscape including natural and/or man-made features.

map generalisation

The process of reducing the complexity of the detail on a map when reducing the map scale.

map header

Data at the start of the [digital map file](#) describing that data. It may contain information on the source and history of the [geometric data](#) within the map and the coordinate system in use.

map projection

The systematic arrangement of meridians and parallels portraying the curved surface of the sphere or spheroid upon a plane.

map scale

The ratio between the extent of a feature on the map and its extent on the ground, normally expressed as a representative fraction, for example, 1:1250 scale or 1:50 000 scale.

map sheet unit

The ground area covered by a single map.

mean high water/springs (MHW or MHWS)

Depiction of the encroachment of land by tidal waters at mean highest levels – spring tides in Scotland.

mean low water/springs (MLW or MLWS)

Depiction of limits of tidal waters at mean lowest ebb – spring tides in Scotland.

megabyte (Mb)

1 048 576 bytes, a measure of data storage capacity.

National Grid

The metric grid on a Transverse Mercator projection used by Ordnance Survey on all post-war mapping to provide an unambiguous spatial reference in Great Britain for any place or entity, whatever the map scale.

northings

See [rectangular coordinates](#).

NTF (National Transfer Format)

A format designed in 1988 specifically for the transfer of spatial information. Administered by the Association for Geographic Information (AGI), its present version (2.0) conforms to BS 7567. NTF is used to supply Land-Form PANORAMA (see also [DXF](#)).

origin

The zero point in a system of **rectangular** Cartesian **coordinates**.

parity

The practice of appending a check-bit to binary values to make the sum of the 1-bits always odd or always even. A mechanism for error detection.

physical record

In NTF, a physical record may be fixed length (in which case it contains 80 characters) or variable length (which contains **up to** 80 characters). (See also [logical record](#).)

point

A zero-dimensional spatial abstraction of an object represented as a coordinate pair.

point feature

A zero-dimensional spatial abstraction of an object with its position defined by a coordinate pair. Points may also be represented by symbols which may have attributes such as orientation and size.

positional accuracy

The degree to which the coordinates define a point's true position in the world, directly related to the spheroid and/or projection on which the coordinates system is based.

precision

The exactness with which a value is expressed, whether the value be right or wrong.

rectangular coordinates

Also known as x-y coordinates and as [eastings](#) and [northings](#). These are two-dimensional coordinates which measure the position of any point relative to an arbitrary origin on a plane surface, for example, a map projection, a digitising table or a VDU screen.

sheet

See [map sheet unit](#).

source scale

The scale of the source information from which the map was digitised, that is the scale of survey for a basic scale map, or the scale of the source map for a derived map.

spot height

A point on the Earth's surface for which the height, above a reference datum, is known and which has been fixed by observation.

structure

See [data structure](#).

surveying

The determination of the absolute and relative positions of points, on or near the Earth's surface, by means of measurement in the three elements of space; distance, direction and elevation, and hence their subsequent representation onto a plane surface, exhibiting them in their correct horizontal and vertical relationships.

terminator

A character, or character string, or field or record used to signal the end of a record or section or volume or database.

topographic database

A [database](#) in which data relating to the physical features and boundaries on the Earth's surface is held.

topography

Topography is the study of the physical features of the earth. A topographic map's principal purpose is to portray and identify the features of the earth.

transfer format

The [format](#) used to transfer data consistently between computer systems. In general usage this can refer not only to the organisation of data but also to the associated information, such as attribute codes, which are required in order to successfully complete the transfer.

transfer medium

The physical medium on which digital data is transferred from one computer system to another. For example, CD-ROM.

transfer set

A specific NTF term for the data, together with its supporting information, which the customer receives.

vector

A straight line joining two data points.

vector data

Positional data in the form of coordinates of the ends of **line segments**, points, text positions and so on.

volume

A physical unit of the transfer medium, that is, a single disk, a single DAT, a single CD-ROM and so on.

